


SERVICE MANUAL

**CALCULATOR
PLOTTER****9125A**

...ER ELECTRONICS
MASTER FILE
DO NOT SHIP

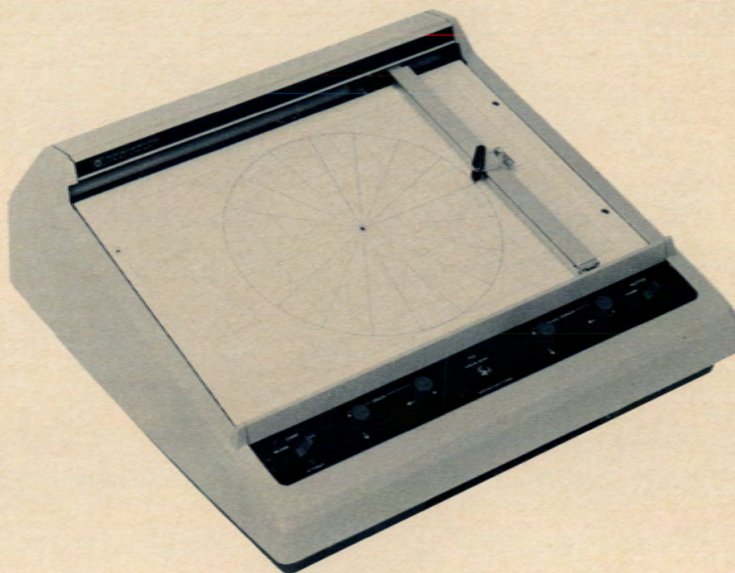

HEWLETT  PACKARD



SERVICE MANUAL

9125A CALCULATOR PLOTTER

SERIAL PREFIX: 1002

This service manual applies to HP Model 9125A Calculator Plotters having serial prefix 1002 or below.

Copyright HEWLETT-PACKARD 1970
16399 W. BERNARDO DRIVE, SAN DIEGO, CALIFORNIA 92127

09125-90008

Printed: APRIL 1970

TABLE OF CONTENTS

Section	Page	Section	Page
I INTRODUCTION	1-1	3-34. X-Axis Mylar Drive Belt	
1-1. Introduction	1-1	Tension Check	3-8
1-3. Model-Manual Information	1-1	3-35. X-Axis Mylar Belt	
1-5. Manual Change	1-1	Replacement	3-8
1-7. Manual Content	1-1	3-36. X-Axis Drive Train Bearing	
		Replacement	3-9
II THEORY OF OPERATION	2-1	3-37. Mechanical Adjustments	3-10
2-1. Introduction	2-1	3-38. Y-Axis Pen Carriage	
2-3. Theory	2-1	Adjustment	3-10
2-5. Information Transfer	2-1	3-39. Y-Axis Backlash Adjustment	3-10
2-6. First Phase	2-1	3-40. X-Axis Track Bearing	
2-7. Second Phase	2-1	Adjustment	3-11
2-8. Third Phase	2-1	3-41. X Gear Train Backlash	
2-10. Fourth Phase	2-4	Adjustment	3-11
		3-42. Y-Axis Alignment	3-11
III MAINTENANCE, PERFORMANCE		3-43. X-Axis Alignment	3-12
CHECKS, AND ADJUSTMENTS	3-1	3-44. Performance Checks	3-12
3-1. Introduction	3-1	3-47. Control Settings	3-12
3-3. Preventive Maintenance	3-1	3-48. Power Application	3-12
3-5. Environmental Operation	3-1	3-49. Functional Check	3-12
3-6. Cleaning	3-1	3-50. Install Paper	3-12
3-7. Potentiometer Cleaning	3-1	3-51. Initial Positioning	3-12
3-8. Lubrication	3-1	3-52. Origin Shift	3-12
3-9. Visual Inspection	3-2	3-53. Carriage Adjustment Check	3-12
3-10. Performance Tests	3-2	3-54. Interface and Control Circuits	3-12
3-12. Test Equipment	3-2	3-55. Power Supply Adjustments	3-12
3-13. System Check	3-2	3-56. Slidewire Reference Supply	
3-14. Mechanical Maintenance	3-3	Adjustments	3-13
3-15. General Disassembly	3-3	3-57. Timer Adjustments	3-13
3-16. Removal of Carriage Arm	3-4	3-58. Short Timer	3-13
3-17. Removal of Pen Carriage	3-4	3-59. Long Timer	3-13
3-18. Wiper Replacement (Y-Axis)	3-4	3-60. DAC Alignment	3-13
3-19. Limit Switch Wiper Replace-		3-61. X DAC Alignment	3-14
ment (Y-Axis)	3-4	3-62. Y DAC Alignment	3-14
3-20. Wiper Replacement (X-Axis)	3-4	3-63. Vector Generation Alignment	3-14
3-21. Potentiometer Replacement		3-64. Deadband Verification	3-14
(Y-Axis)	3-5	3-65. Vector Alignment Preliminary	3-16
3-22. X-Axis Slidewire/Limit Switch		3-66. Filter Matching	3-16
Replacement	3-5	3-67. Linearity	3-16
3-23. Y-Axis Restringing	3-6	3-68. Functional Test	3-16
3-25. Y-Axis Drive String Tension		3-69. Control Settings	3-16
Check	3-6	3-70. Final Test	3-16
3-26. Y-Axis Drive String Tension			
Adjustment	3-6	IV PARTS LIST	4-1
3-27. Restringing Procedure	3-6	4-1. Introduction	4-1
3-28. X-Axis Restringing	3-7	4-3. Ordering Information	4-1
3-31. Restringing Procedure	3-7		
3-32. X-Axis Cable Tension Check	3-8	V TROUBLESHOOTING	5-1
3-33. X-Axis Cable Tension		5-1. Introduction	5-1
Adjustment	3-8	5-3. Troubleshooting	5-1

LIST OF ILLUSTRATIONS

Figure	Title	Page	Figure	Title	Page
1-1.	Model 9125A Calculator Plotter	1-0	3-17.	Y-Axis Gear Train Backlash Adjustment	3-11
1-2.	Instrument Identification	1-1	3-18.	X-Axis Track Bearing Adjustment	3-11
2-1.	Logic Flow Diagram	2-2	3-19.	X-Axis Gear Train Backlash Adjustment	3-12
2-2.	Block Diagram	2-3	3-20.	Preliminary Functional Check Program A	3-13
3-1.	Slidewire Cleaning	3-2	3-21.	Functional Check Graph Program A	3-14
3-2.	Slidewire Lubrication	3-2	3-22.	Card Location Guide	3-15
3-3.	Diagnostic Plot	3-3	3-23.	Axis Amplifier (X or Y)	3-15
3-4.	Y Slidewire Cover Removal	3-3	3-24.	Timer Program	3-16
3-5.	Autogrip Lead Removal	3-4	3-25.	DAC Alignment	3-17
3-6a.	Carriage Arm Removal (Upper)	3-5	3-26.	Vector Alignment	3-17
3-6b.	Carriage Arm Removal (Lower)	3-5	3-27.	Linearity	3-18
3-7.	Wiper Protection	3-5	3-28.	Functional Test Program B	3-19
3-8.	Slidewire Lead Connections	3-6	3-29.	Functional Test Graph Program B	3-20
3-9.	Y-Axis Drive String Tension Check	3-6	4-1.	X-Axis Drive Assembly	4-3
3-10.	X and Y Axes Restraining	3-7	4-2.	Pen Arm Assembly	4-4
3-11.	X-Axis Cable Tightening	3-8	5-1.	Printed Circuit Board Locations	5-1
3-12.	X-Axis Cable Tension Check	3-8	5-2.	Troubleshooting Chart	5-2
3-13.	X-Axis Belt Tension Check	3-8			
3-14.	X-Axis Drive Train Bearing Locations	3-9			
3-15.	Y-Axis Motor Clamp Screw	3-10			
3-16.	Pen Carriage Adjustment	3-10			

LIST OF TABLES

Number	Title	Page	Number	Title	Page
3-1.	Recommended Test Equipment	3-2	3-3.	Slidewire Reference Supply Adjustment	3-14
3-2.	Power Supply Adjustments	3-13	3-4.	X DAC Alignment	3-14
			4-1.	Parts List	4-2

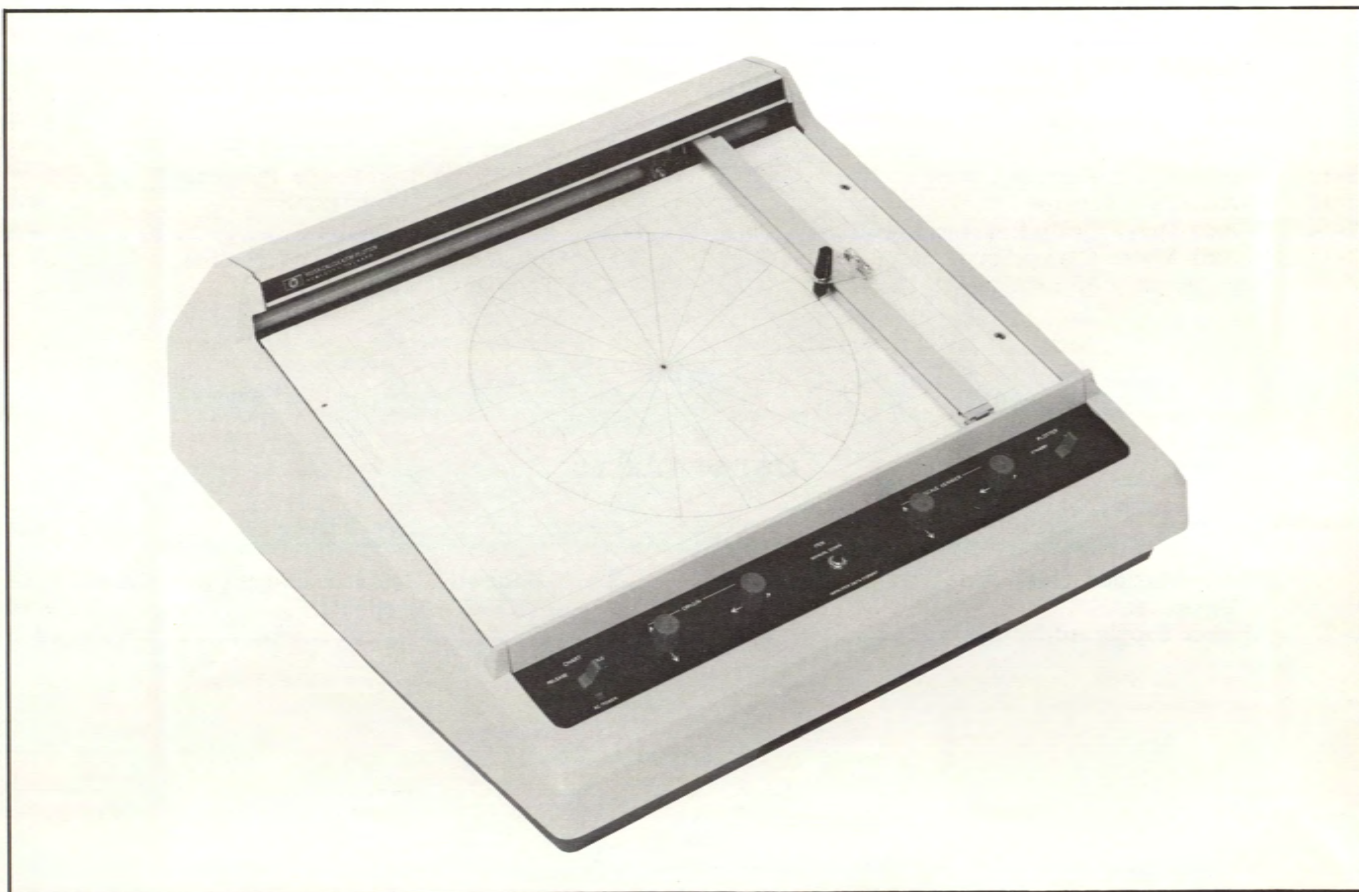


FIGURE 1-1. MODEL 9125A CALCULATOR PLOTTER

SECTION I

INTRODUCTION

1-1. INTRODUCTION

1-2. The Model 9125A Calculator Plotter (see Figure 1-1) is an X-Y plotter intended for use only with the HP Model 9100A or 9100B Calculator. All plotter operation in this manual refers to the combination of the calculator and plotter.

1-3. MODEL - MANUAL INFORMATION.

1-4. This manual is applicable to the Model 9125A with a serial prefix of 1002 or lower. Earlier instruments have a serial prefix that is the first three digits of a two-part eight digit serial number (000-00000) used to identify the instrument. More recent instruments have a serial prefix that is the first four digits of a two-part nine digit serial number (0000A00000) used to identify each HP instrument (see Figure 1-2). The letter separating the prefix from the suffix identifies the country of origin.

1-5. MANUAL CHANGE.

1-6. Should any change in this manual be necessary, a new serial prefix will be assigned to the changed model and a change sheet will be supplied defining the difference between the changed model and the one described within this manual. Other corrections, due to any errors that existed when this manual was

printed, will be provided. These changes are called Errata and will appear only on the change sheet (Manual Change). For additional information pertaining to this manual, or other HP instruments, contact the nearest Hewlett-Packard Sales/Service Office listed in the back of this manual.

1-7. MANUAL CONTENT.

1-8. This manual contains sections covering theory of operation, maintenance, and troubleshooting. Sufficient information is provided so that all required mechanical maintenance and troubleshooting can be performed. Electrical maintenance and troubleshooting, however, is covered only on a circuit board or module level.

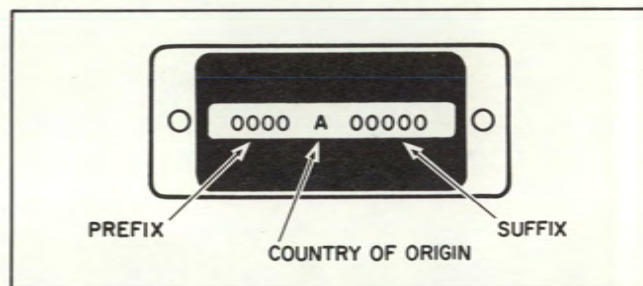


FIGURE 1-2. INSTRUMENT IDENTIFICATION

SECTION II

THEORY OF OPERATION

2-1. INTRODUCTION

2-2. This section deals primarily with Calculator-Plotter interface logic flow. It covers basic operation of the plotter on the functional block level. A theory of operation at the component level is not included.

2-3. THEORY

2-4. GENERAL. The 9125A Calculator Plotter operates by interpreting the coordinate values stored in the X and Y registers of the 9100A/B Calculator. Information is transferred from the X and Y display registers only while the calculator is in the display routine. Refer to Figure 2-1, Logic Flow Diagram and to Figure 2-2, Block Diagram.


2-5. INFORMATION TRANSFER. Information transfer from the calculator to the plotter is divided into four primary logical phases. The initial phase consists of detecting and decoding the proper operation code. This code is the $\uparrow$ or $\downarrow$ operation. The FMT initiates the display routine. The FMT code and the $\uparrow$ or $\downarrow$ code defines the plotting mode. The second phase determines the plotter and pen status. A determination is made in this phase as to whether the plotter is through plotting the last point and whether the pen is on or off the paper. The third phase consists of simply collecting the coordinate data and transferring the data to the appropriate digits in the digital to analog converter (DAC). The fourth and final phase initiates the actual plot of the new coordinate, sets the appropriate timers to allow sufficient time to actuate the pen if necessary, and issues a continue code to the calculator. The continue code starts the calculation of the next point while the previous point is being plotted. The four-phase cycle is then repeated.

2-6. FIRST PHASE. The first phase of the information transfer is initiated by an IOPF output from the calculator (see Figure 2-1). This indicates an operation code will follow (from keyboard if F41 is false, from program if F41 is true). FF 25 remembers whether the operation is from the keyboard or the program. The operation was a FMT if HFMT is issued coincident with IOPF. HFMT sets FF 20 which enables the FMT gate to decode the code lines, F20-F25, coincident with the next ITBB from the

calculator. FF 20 is cleared and the sequence starts over if the code is not an $\uparrow$ or $\downarrow$. If the code is an $\uparrow$ or $\downarrow$, FF 21 is set which forces the calculator into a fixed point display, and triggers FFPDL when the plotter is ready for the next data point. FFPDL is a 40 ms pen delay. Additionally, a $\downarrow$ code sets FF 70, a $\uparrow$ code clears FF 70, determining whether the plot will be made with the pen up or down. When the clock (data strobe, a stretched version of ITBB) goes false, FF 20 is cleared to disable the FMT gate until the next FMT operation occurs.

2-7. SECOND PHASE. When ETS (0.9 s timer) and ETL (1 s timer) are true, indicating the plotter is ready to transfer data, along with FF 21, FFPDL (40 ms pen delay) is triggered. FFPDL allows the pen drop mechanism to actuate before any data is transferred. It is actuated for every data transfer, whether the pen is up or down, but adds negligibly to the total plot time. FF 90 indicates, when true, the pen was up when a previous FMT $\downarrow$ was encountered. When ETL goes true, FF 80 (direct pen status control) is set and the pen drops. If FF 90 is false and a FMT $\downarrow$ is encountered (FF 70 is set) it means the pen is down and the plotter is ready to transfer data as soon as the hold-off timers are all true. A FMT $\uparrow$ (FF 70 cleared) clears FF 80 and lifts the pen when the hold-off timers are all true.

2-8. THIRD PHASE. The start of the third or coordinate data collection phase is signaled by the 60 Hz sync state of the calculator display routine. F40 and F41 indicate the state of the display when the calculator is in display mode, as shown by the chart on the flow diagram (Figure 2-1). FF 22 is set when sync is reached and the hold-off timers are cleared. FF 22 activates the DAC hold circuits and the old coordinate is retained. The decimal digits are transferred into the DAC least significant bit first, starting with the X register into the X axis and ending with the Y register into the Y axis of the plotter. FF 22 also activates the various digit decoding gates to determine which character is currently being transferred (present on code lines). When the state of F41 changes, it indicates the start of a new display register. The digit counter, a counter which counts ITBB's when F22 is set, is reset so that it can keep track of the number of decimal digits being transferred and fix

 

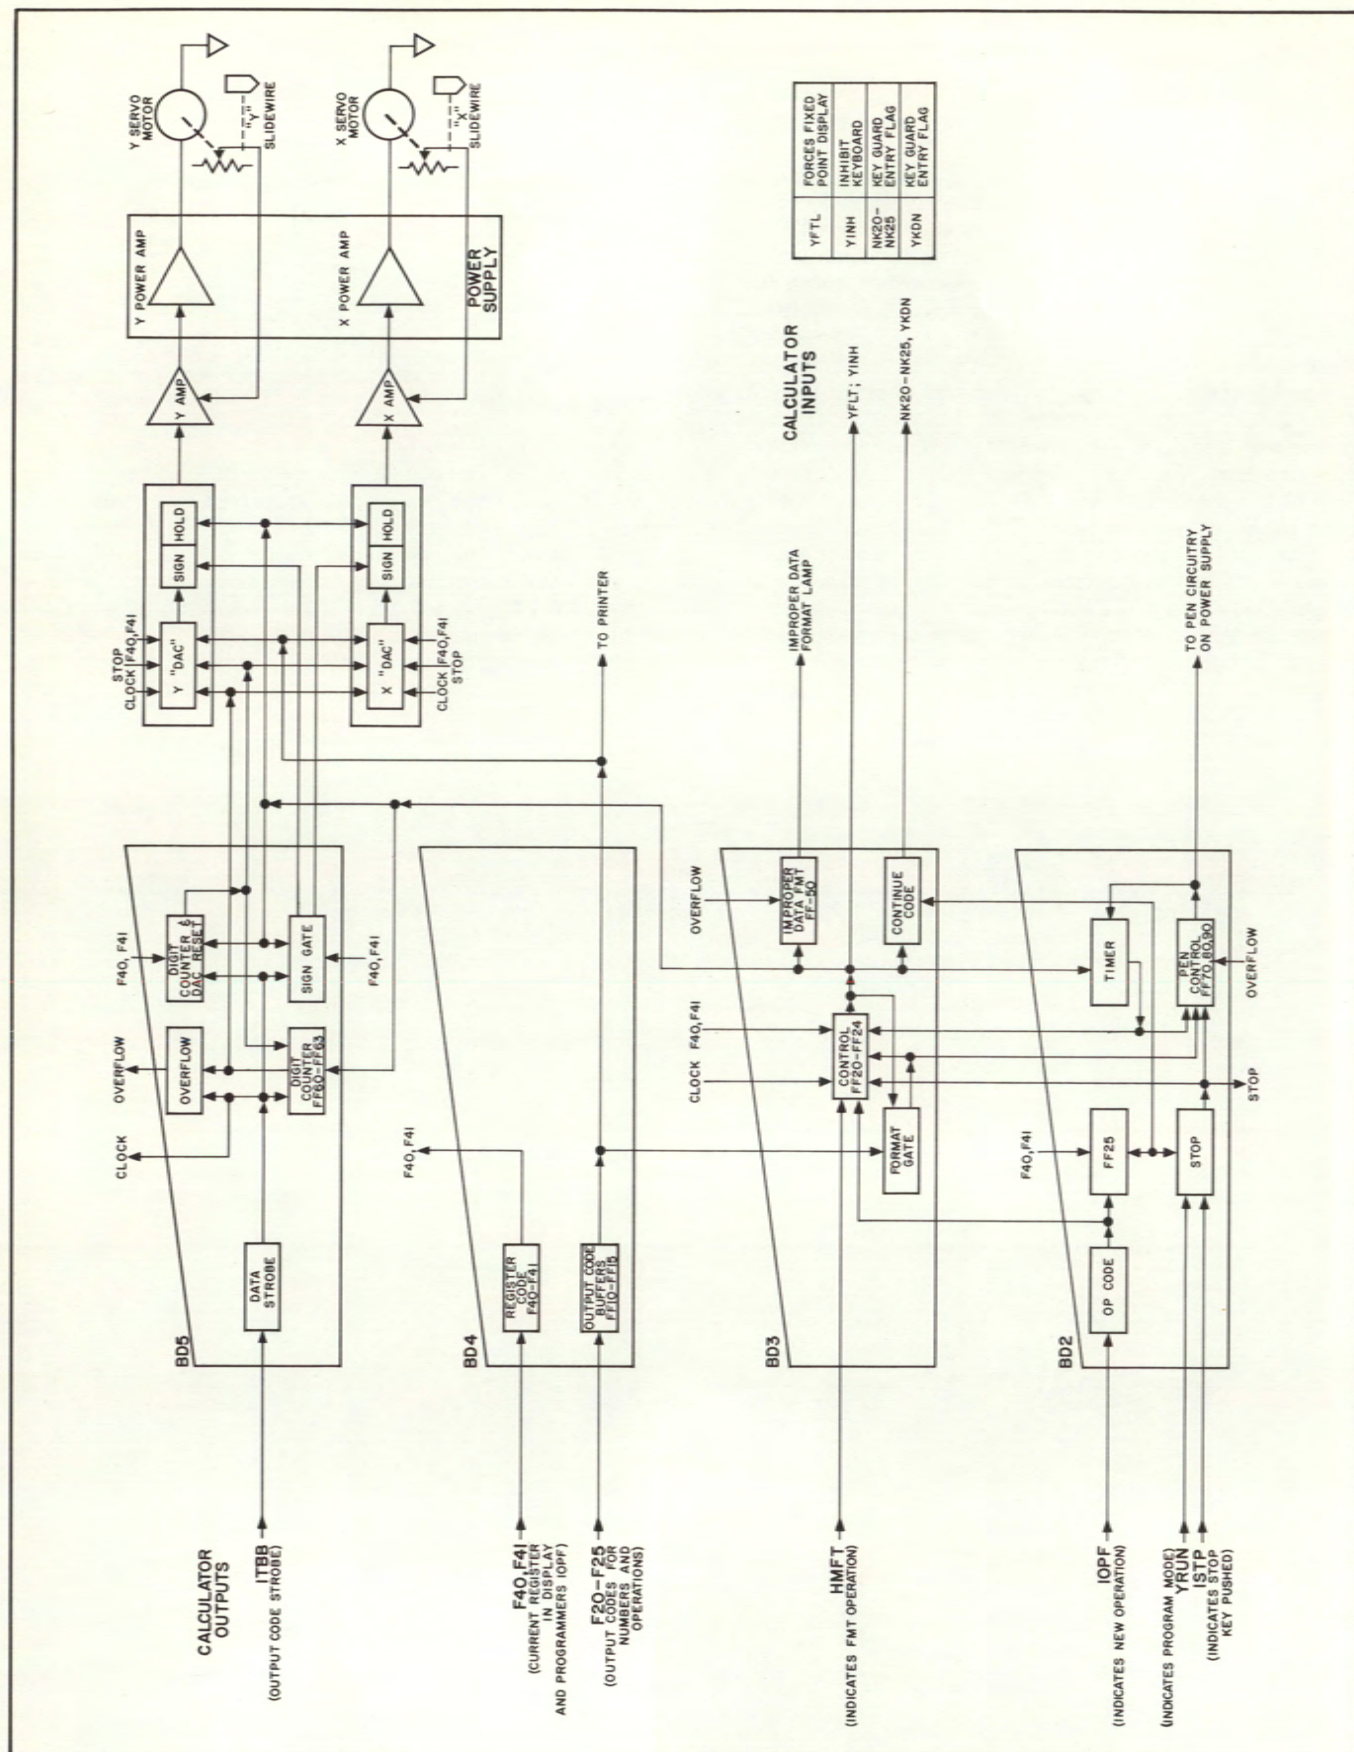


FIGURE 2-2. BLOCK DIAGRAM

the relative position of the serial digits in the appropriate decade of the DAC.

2-9. There are a pair of ITBB's for each character (including blanked zeros) except the decimal point for which the ITBB occurs only once. The first ITBB after F22 is set, increments the digit counter and places the first decimal digit in the 10^0 decade of the X DAC. The second ITBB merely increments the digit counter. Subsequent decimal digits are similarly stored and the digit counter is incremented for each ITBB. If a decimal point is encountered, the digit counter is reset along with the DAC currently being loaded. Only the digits to the left of the decimal point are of any interest and will remain loaded in the DAC. When a negative sign is encountered, it means the last digit was stored and the appropriate sign flip-flop is set (FFXS when F41 is false, and FFYS, when F41 is true). This reverses the analog input to the servo channel. If the digit counter reaches the state 1110, seven characters were encountered before or after the decimal point. This indicates an illegal data format. FF 50 is set and lights the Improper Data indicator; FF 70 is cleared so the pen will lift to keep the improper data from appearing on the graph. The beginning of a new register is indicated by the change of state of F41 at which time the

digit counter is reset and the whole process starts again. When E40 goes false (F40 goes true), it indicates the start of the Z register. This means the X and Y coordinates are stored and the final, or plot, phase can begin.

2-10. FOURTH PHASE. As E40 goes false, it clears FF 21 and FF 22. The calculator is released from the mandatory fixed point display and the DAC's with the new coordinate are reconnected by the hold switches to the servo channel. FF 22 sets FF 24 which allows for a possible continue command to the calculator. FFTS is triggered and will hold off a new data point for at least 0.9 s while the most recent coordinate is being plotted.

2-11. If E80 is true (F80 is false or cleared), the pen is up and the one second timer (ETL) is enabled. When F21 clears and if F70 is true, FF 90 is set, which causes the pen to drop when the timers go true. If the FMT command was issued from the program when FF 24 is true, a continue command is issued. The FMT command is indicated by FF 25. The calculator now calculates the next point while the plotter moves to the coordinate just transferred. The four-phase cycle is then repeated.

SECTION III

MAINTENANCE, PERFORMANCE CHECKS, AND ADJUSTMENTS

3-1. INTRODUCTION

3-2. This section provides information for maintenance, performance testing, functional checks, and adjustment of the 9125A Calculator Plotter. Maintenance procedures, tests and adjustments will ensure that the instrument conforms to specifications. Functional checks maintain the instrument in an operational condition. If the instrument fails to meet specifications, or is inoperable, refer to Section V, Troubleshooting.

3-3. PREVENTIVE MAINTENANCE

3-4. GENERAL. The Model 9125A Calculator Plotter must be maintained properly to obtain accurate, trouble-free operation. This requires periodic lubrication, performance checks, and visual and electrical checks. In accordance with good maintenance procedures for all precision measuring instruments, Hewlett-Packard recorders should be protected from dust. Use furnished dust cover P/N 4040-0477, when not in use.

3-5. ENVIRONMENTAL OPERATION. This instrument is designed to operate over an ambient temperature range of 0°C to 55°C. Operation under other conditions will produce inaccurate results and may cause damage to the plotter. In areas with high humidity, graph paper may become distorted, affecting the accuracy of the grid lines. The area of operation should also be as free as possible of air contamination (soot, smoke, fumes, etc.). Excessive air contamination will require more frequent cleaning.

3-6. CLEANING. Thorough cleaning should be performed periodically. Intervals are determined by type of operation, local air contamination, and climatic conditions. Generally, under normal use and conditions, cleaning intervals should be nine to twelve months. Cleaning routine should include the following:

a. Remove platen and raise hinged top casting (see paragraph 3-15.

b. In inaccessible areas and where there is only dust accumulation, cleaning can be accomplished with an air gun. In more accessible areas and where

air gun will not remove dirt, dust, or ink, accumulations should be removed with a sponge or cloth saturated in plain soap and warm water, then wiped dry.

c. Every eighteen to twenty-four months, gears should be cleaned thoroughly with a solvent and re-lubricated. Do not use soap or water on these components.

d. Platen should be cleaned with plain soap and warm water.

CAUTION

Do not use solvents or silicone-based cleaners of any type on the Autogrip platen.

e. Clean slidewires. See paragraph 3-7.

3-7. POTENTIOMETER CLEANING. Irregular or "jumpy" plots produced on a properly adjusted recorder may indicate worn or dirty balance potentiometers or wipers. To clean the potentiometers, spray the potentiometer and limit switch along their entire length with Slidewire Cleaner (Part No. 5080-3605). Rapidly move the carriage arm or pen carriage several full scale excursions. Spray the wipers directly with Slidewire Cleaner. Thoroughly saturate a Kimwipe (Kimberly-Clark Type 900-S) or a cotton swab with Slidewire Cleaner. Rub the potentiometer (wire mandrel and return strip) and limit switch along their entire length, using the moistened tissue or swab (see Figure 3-1). Note any discoloration of the tissue or swab after rubbing. Repeat the cleaning procedure until there is no stain, then clean once more to ensure that all contaminants have been removed. After cleaning, the potentiometer (wire mandrel and return strip) and limit switch must be lubricated with the furnished Slidewire Lubricant (Part No. 5080-3635). This lubrication will reduce wear and chemical contamination of the assembly (see Figure 3-2). For access to the slidewire, see paragraph 3-15 b and c.

3-8. LUBRICATION. The Model 9125A is a precision instrument. Gears and other moving parts have very close tolerances. Lubricate gears sparingly; overlubrication may produce more friction than no lubrication.



FIGURE 3-1. SLIDEWIRE CLEANING

Intervals between periodic lubrication are determined by the type of operation, local air contamination, and climatic conditions. Generally, under normal use and conditions, the plotter should be lubricated every nine to twelve months. Relubricate completely every two years. All ball bearings are prelubricated by the manufacturer and require no further lubrication.

- a. Apply a thin film of lubricant on X and Y drive gears (including idler gear). Recommended grease: HP 6040-0222.

CAUTION

Lubricant must not spill onto X-axis drive belt or cable, or Y-axis drive cable.

3-9. VISUAL INSPECTION. During periodic cleaning and lubrication, a planned visual inspection should be performed. The following general list can be used as a guide:

- a. Check both X and Y drive gears for proper adjustment (minimal backlash), and any worn or damaged teeth.
- b. Inspect X-axis drive cable pulleys for any binding.
- c. Ensure that both servo motors are mounted securely.
- d. Move pen carriage, listening for scrapes, grinding noises, etc., while feeling for any binding in movement. Repeat this procedure for carriage arm.
- e. Check cables of both axes for evidence of fraying or rubbing.

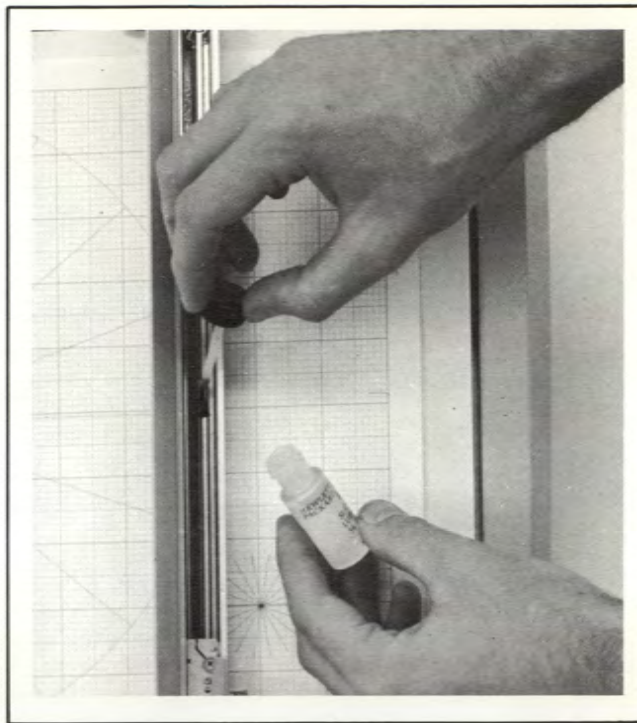


FIGURE 3-2. SLIDEWIRE LUBRICATION

- f. A check of components should include inspection for evidence of overheating, loose connections, cracked circuit boards, etc.

3-10. PERFORMANCE TESTS

3-11. The following procedures test the plotter's performance for periodic evaluation, calibration, and troubleshooting. These tests can be performed without opening the recorder.

3-12. TEST EQUIPMENT. Instruments and accessories required for adjusting and testing are listed in Table 3-1.

TABLE 3-1. RECOMMENDED TEST EQUIPMENT

Model 140B Oscilloscope
Model 3460B Digital Voltmeter
Model 9100A or 9100B Calculator
Magnetic card with diagnostic program (Part No. 09125-90002)

3-13. SYSTEM CHECK. The following procedure confirms the plotter is operating properly and is correctly installed:

- a. Confirm 9100A/B Calculator is operating by executing calculator diagnostic routine (see page 5 of 9100 Operation and Programming Manual).
- b. Place sheet of graph paper supplied with 9125A firmly against bottom paper guide and left edge paper stop. Set CHART RELEASE-HOLD switch to HOLD. Smooth paper to platen.

c. Calibrate plotter. See pull-out instruction card in plotter base.

d. Insert PLOTTER DIAGNOSTIC CARD into calculator's card reader.

NOTE

Same program is on both sides of diagnostic card.

e. On calculator:

1. Set power to ON.
2. Set decimal wheel to 3.
3. Set PROGRAM-RUN to RUN.
4. Set RADIANS-DEGREES to DEGREES.
5. Press END.
6. Press ENTER.
7. Press STOP.

f. On plotter, set STANDBY/ON to ON, set pen in exact center of paper using ORIGIN controls.

g. On calculator press END, then CONTINUE.

Proper execution of the program is indicated by a circle enclosing 18 spokes. The circle should be well formed, with the spokes having no more than 0.04 in. (1,0 mm) openings. The spokes may exhibit some waviness or a slight oscillatory appearance, particularly at the ends. This waviness must not make the distance between outside edges of the line exceed one pen width plus 0.040 in. (1,0 mm). The exact diameter of the circle depends on where the sensitivity controls are set. However, the diameter should be approximately 9 in. (23 cm). Should the plotter fail the diagnostic, refer to Section V of this manual.

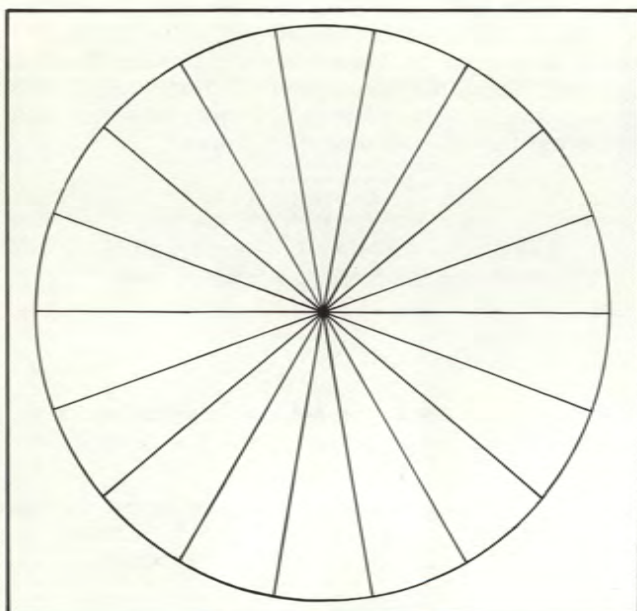


FIGURE 3-3. DIAGNOSTIC PLOT

3-14. MECHANICAL MAINTENANCE

3-15. GENERAL DISASSEMBLY. Access to the various components of the 9125A can be accomplished as follows:

a. Remove ac power cord.

b. Access to X axis slidewire and limit switch assembly is obtained by removing rear hood, which is held in place by two screws. To remove, turn each screw one full turn counterclockwise.

c. For access to Y-axis slidewire and limit switch assembly: 1) remove rear hood, 2) turn the black tab at upper end of scale 90° counterclockwise, 3) lift pen holder back to detent position and open slidewire cover.

d. Slidewire cover on the Y arm may be removed by pushing back on upper cover support with thin-bladed screwdriver (see Figure 3-4). This disengages cover and fully exposes Y axis slidewire limit switch and drive components.

e. Access to electronic components may be obtained by raising hinged top casting. Top and bottom castings are secured together by two screws located under bottom front lip of plotter.

f. X-axis drive system may be reached by removing recording platen as follows: 1) raise hinged top casting as outlined in step e; 2) remove Autogrip leads shown in Figure 3-5; 3) remove four No. 8-32 and two No. 6-32 mounting screws holding platen; 4) place carriage arm at far right of travel; 5) pull up on upper left hand corner of platen and slide platen out to left. Be sure to replace Autogrip leads when replacing platen.

g. To gain access to Y arm's lower slider block, remove paper alignment bar as follows: 1) raise hinged top casting as outlined in step e; 2) near front edge of top casting locate three No. 6-32 and three



FIGURE 3-4. Y SLIDEWIRE COVER REMOVAL



FIGURE 3-5. AUTOGRIP LEAD REMOVAL

No. 8-32 screws - remove only the three No. 8-32 screws; 3) close top and carefully lift alignment bar up and out.

3-16. REMOVAL OF CARRIAGE ARM. The carriage arm may be removed for replacement or service as follows:

- a. Remove pen from holder.
- b. Remove rear hood.
- c. Remove X-axis potentiometer to prevent its being damaged (see paragraph 3-22).
- d. Release Y slidewire cover and remove from arm (see Figure 3-4).
- e. The arm is held by two shouldered screws at upper end (see Figure 3-6a) and one screw at its lower end (see Figure 3-6b).

1. Remove screws (1), (2), and (3) and lift arm off of its motor block.

2. Lift arm up, separating it from lower carriage mount. Be careful not to damage wires connecting slidewire/limit switch assembly to motor block.

- f. Reassemble carriage arm. Align Y axis. See paragraph 3-42.

3-17. REMOVAL OF PEN CARRIAGE. The pen carriage may be removed for replacement or service as follows:

- a. Remove carriage arm from recorder as described in paragraph 3-16.

- b. Remove nylon drive cord from around drive and return pulleys.

- c. Remove retaining block and return pulley at lower end of carriage arm.

- d. Slide carriage out of the arm.

- e. Reassemble and adjust pen carriage as described in paragraph 3-38.

3-18. WIPER REPLACEMENT (Y-AXIS). The wiper (Part No. 09125-80590) is made of a metal softer than the slidewire in order to absorb wear. The wiper is located on and is part of the pen carriage. New carriage assemblies should be obtained from the local Sales/Service Office and installed as described in paragraph 3-17.

3-19. LIMIT SWITCH WIPER REPLACEMENT (Y-AXIS). The wiper for the limit switch is located on the pen carriage. New wiper assemblies should be obtained from the local Sales/Service Office and installed as described in the following paragraphs.

CAUTION

Damage to the limit switch may result if other than the factory-supplied wiper is used.

- a. Remove carriage arm and pen carriage (see paragraphs 3-16 and 3-17).

- b. Remove wiper assembly from pen block by removing No. 0-80 screw and nut.

- c. Install new wiper (Part No. 09125-60110) using same screw and nut.

- d. Reassemble and adjust pen carriage per paragraph 3-38.

3-20. WIPER REPLACEMENT (X-AXIS). The wiper is made of metal softer than the slidewire to absorb wear. The wiper is located on the pen motor block at the upper end of the carriage arm. New wiper assemblies should be obtained from the local Sales/Service Office and installed as described below.

CAUTION

Damage to the slidewire may result if other than the factory-supplied wiper is used.

- a. Remove rear hood.

- b. Snap pen lift solenoid out of its spring holder and remove holder by removing one mounting screw.

- c. Remove wiper assembly mounting screw and install new wiper (Part No. 09125-80170). Protect slidewire using technique shown in Figure 3-7.

- d. Reassemble holder and solenoid.

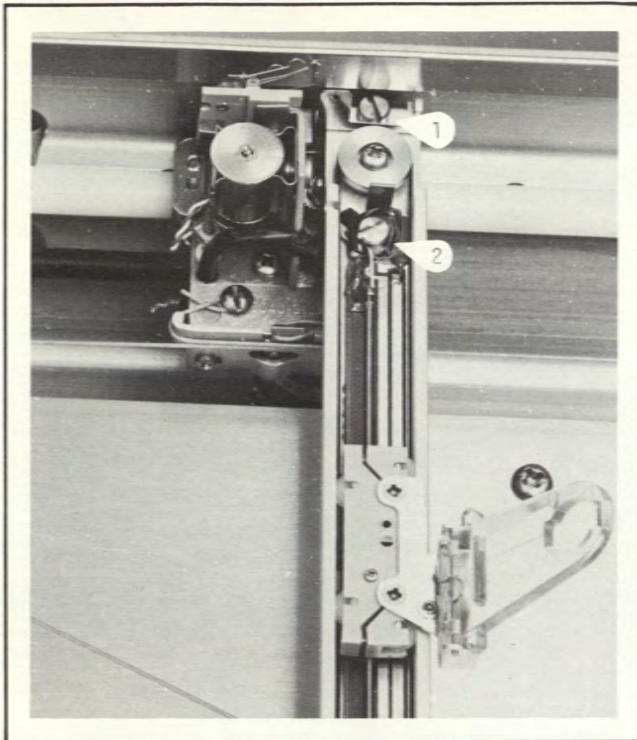


FIGURE 3-6a. CARRIAGE ARM REMOVAL (UPPER)

3-21. POTENTIOMETER REPLACEMENT (Y-AXIS). This unit is located in the carriage arm and is part of the carriage channel. The channel and potentiometer are replaced as one unit. Proceed as follows:

- a. Remove carriage arm (see paragraph 3-16).
- b. Remove all components, i. e., pen carriage, upper idler pulley, etc., from assembly (see paragraph 3-17).
- c. Unsolder six wires, noting order in which leads connect to slidewire (see Figure 3-8).
- d. To install new slidewire/limit switch and arm assembly (Part No. 09125-80160), pass bundle of leads through the small hole at top of arm and put arm assembly in place.
- e. Install pen carriage.
- f. Reinstall two fillister head screws at top taking care to also reinstall slidewire cover hinge and carriage stop.
- g. Replace screw at bottom, securing it to lower slider block.
- h. Resolder wires to the limit switch and slidewire.
- i. Reinstall X-axis slidewire.
- j. Reinstall X-axis wiper.
- k. Reinstall Y-axis slidewire cover.
- l. Check Y-axis alignment. Realign as necessary (see paragraph 3-42).

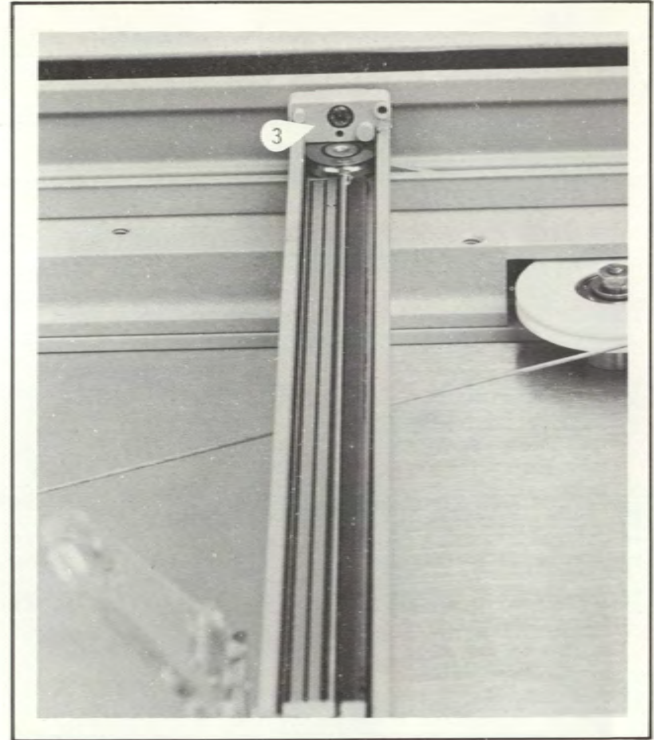


FIGURE 3-6b. CARRIAGE ARM REMOVAL (LOWER)

3-22. X-AXIS SLIDEWIRE/LIMIT SWITCH REPLACEMENT. The slidewire/limit switch assembly and their mounting channel are an integral unit and available only as a single item. Replace as follows:

- a. Remove rear hood.
- b. Remove wiper per paragraph 3-20.

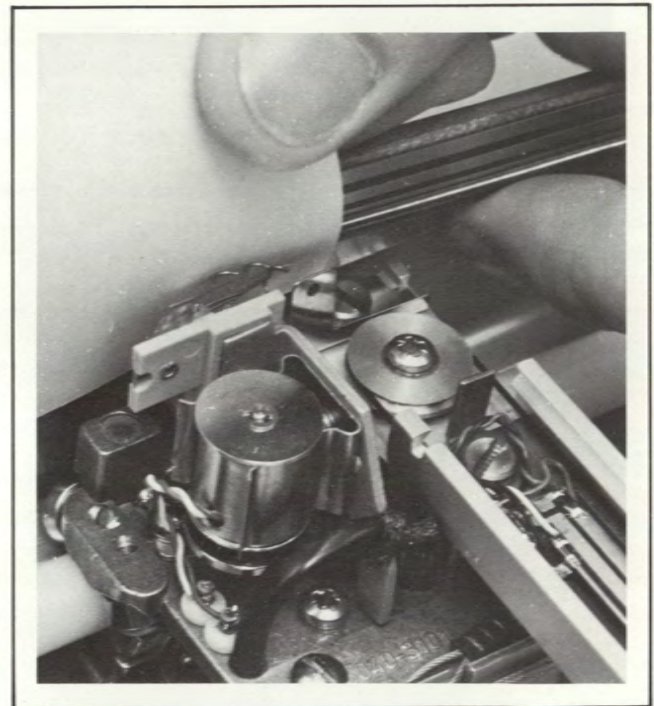


FIGURE 3-7. WIPER PROTECTION

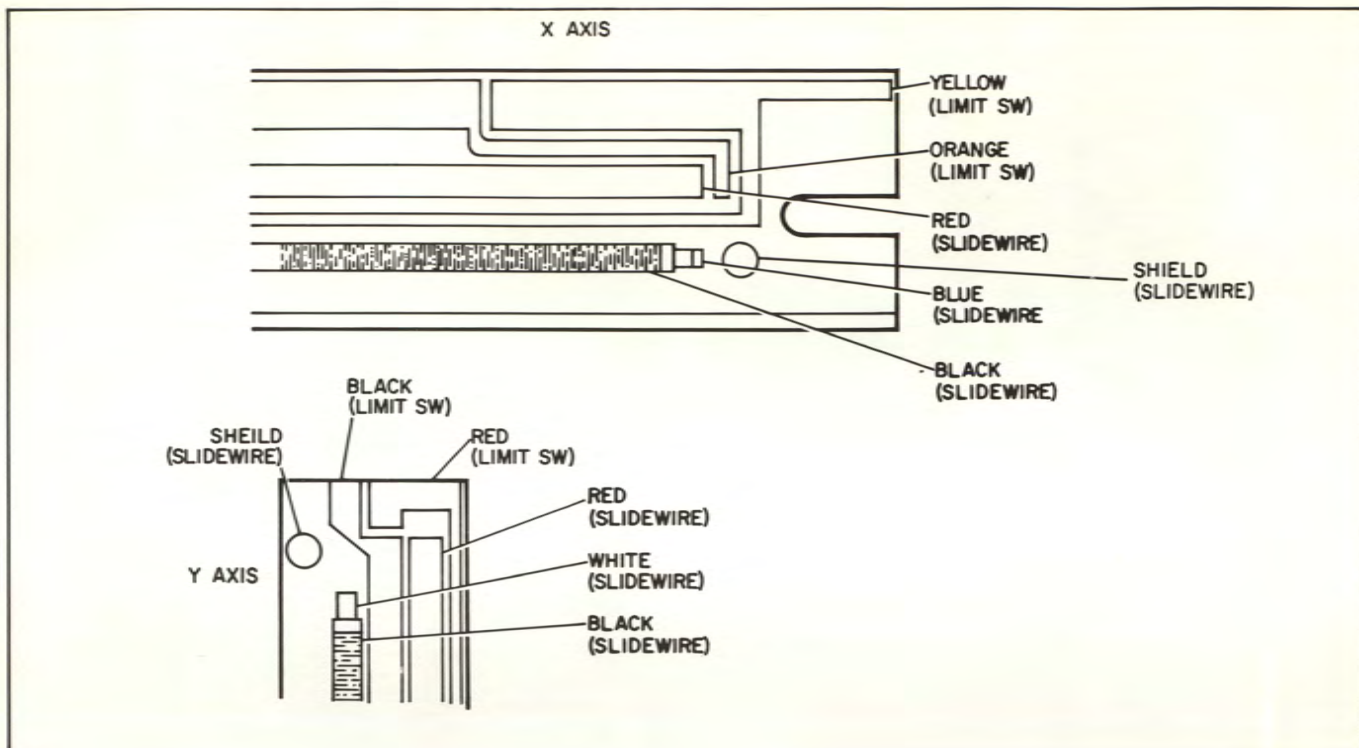


FIGURE 3-8. SLIDEWIRE LEAD CONNECTIONS

c. Unsolder six wires, noting the order in which leads connect to assembly (see Figure 3-8). Top two wires are for the limit switch, bottom four wires are for the slidewire.

d. Remove two screws mounting assembly to frame.

e. Lift assembly up and out.

f. Install new slidewire/limit switch assembly (Part No. 09125-80230). Secure it with two screws.

g. Resolder wires. When soldering, observe color codes and take extreme care not to bridge any gaps with solder.

3-23. Y-AXIS RESTRINGING.

3-24. MATERIAL REQUIRED: Y-axis cable assembly, Part No. 09125-80440.

3-25. Y-AXIS DRIVE STRING TENSION CHECK. The Y cable tension may be verified by measuring the force required to move the pen carriage down-scale while the motor is locked. This required force shall be between the limits of 14 ounces and 20 ounces (see Figure 3-9).

3-26. Y-AXIS DRIVE STRING TENSION ADJUSTMENT. If the string tension is not correct, the string must be lengthened or shortened to attain the desired tension. This can be accomplished by removing the pen block from the pen arm and retying the knot on the end of the string (see paragraph 3-27).

3-27. RESTRINGING PROCEDURE. (Refer to Figure 3-10.)

a. Separate carriage arm from plotter and pen carriage from carriage arm. See paragraphs 3-16 and 3-17.

b. Install a new nylon drive cord assembly, consisting of a cable spring and nylon cord.

1. Attach free end of tension spring to hook on the pen carriage. Insert knotted end of cord in groove of pen block.

2. Slide pen carriage into carriage arm, making sure cable is between pen carriage and slidewire. Care should be taken not to damage wiper.

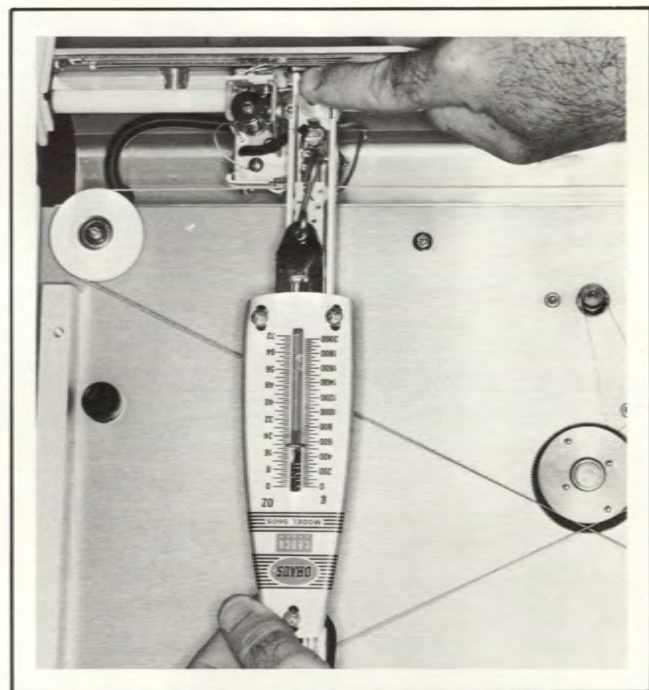


FIGURE 3-9. Y-AXIS DRIVE STRING TENSION CHECK

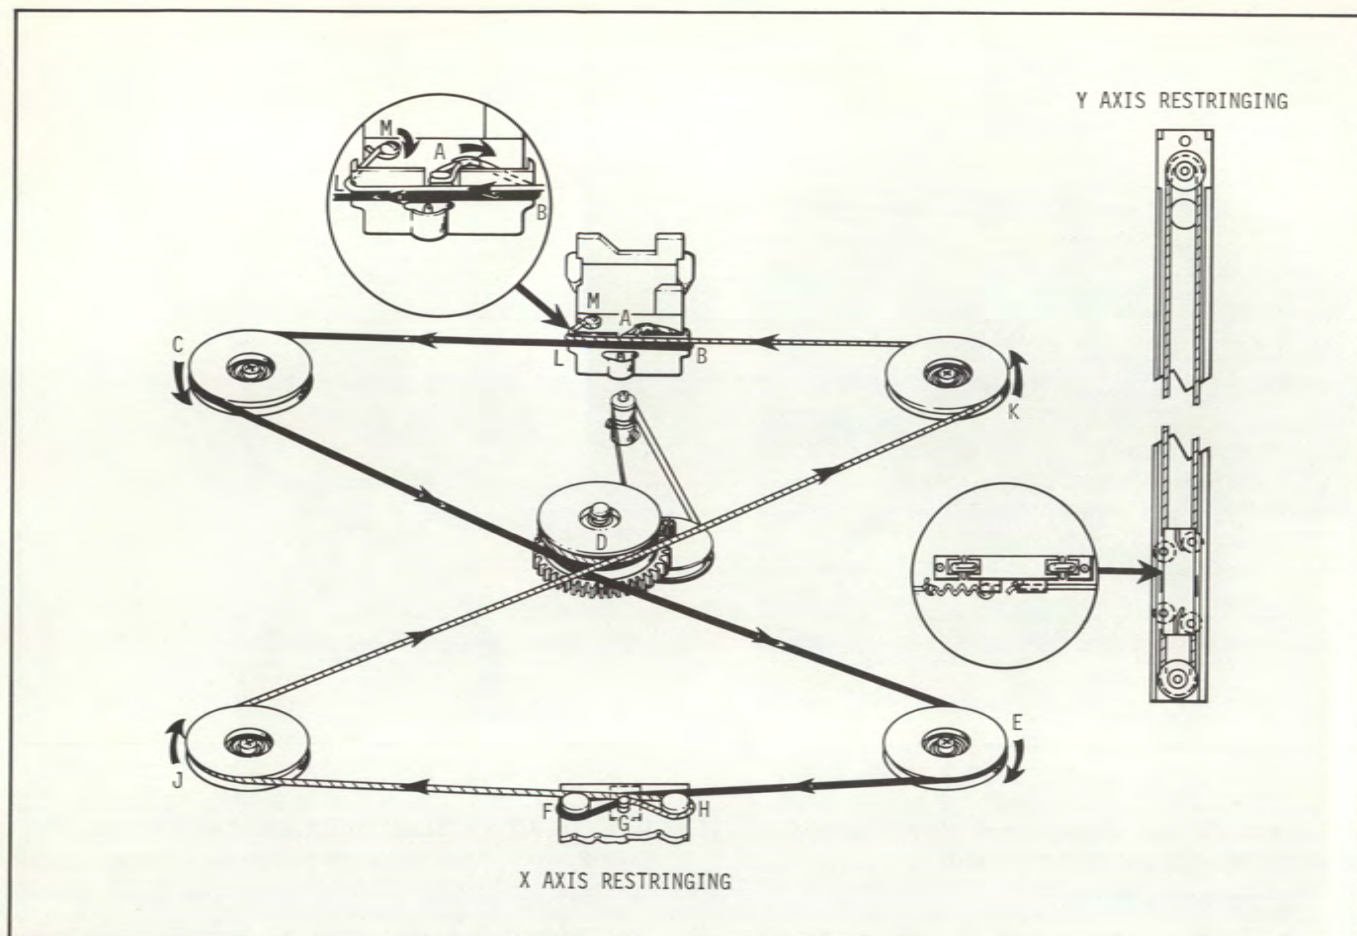


FIGURE 3-10. X AND Y AXES RESTRINGING

3. Loop cord around upper and lower pulleys.
4. Test for proper tension (see paragraph 3-25).
5. Reassemble remaining parts.

3-28. X-AXIS RESTRINGING.

3-29. **DISASSEMBLY.** When restringing the X-axis, the recording platen and paper alignment bar must be removed (see paragraph 3-15).

3-30. **MATERIALS REQUIRED:** X-axis stringing kit, Part No. 5080-7717.

3-31. **RESTRINGING PROCEDURE.** (Refer to Figure 3-10.)

- a. Loosen screw securing stringing plate on lower slider bracket. Access to screw is accomplished by raising upper casting and positioning arm over the access hole in bottom plate.
- b. Remove old cable.
- c. Secure the carriage arm in a convenient position to prevent movement.
- d. Form a small loop of the new cable by inserting it through the cable crimp and doubling the end back.
- e. Crimp cable crimp securely. This operation can be performed with a pair of dikes.
- f. Place loop over stud in center of stringing bracket (Point A).

g. Pass cable around end of bracket (Point B) from back to front.

h. Pass cable across front of bracket to Pulley C and around Pulley C (1/2 turn) in a counterclockwise direction to Drive Sheave D.

i. Place one turn around Drive Sheave in a counterclockwise direction, passing cable under itself and continue to Pulley E.

j. Place 1/2 turn around Pulley E in a clockwise direction and continue to lower slider bracket.

k. Pass wire around stringing guide Point F (1/2 turn) in a counterclockwise direction, passing in front of Screw G while keeping it under plate and then around stringing Guide H (1/2 turn) in a counterclockwise direction.

l. Pass cable back across lower slider bracket passing over itself to Pulley J. Make 1/2 turn around Pulley J in a clockwise direction and continue to Drive Sheave D.

m. Make one turn around Drive Sheave in a counterclockwise direction, above previous turn, and passing cable under itself to Pulley K.

n. Make 1/2 turn around Pulley K in a counterclockwise direction, continuing to front of stringing bracket above cable already there, and around end of bracket (Point L) to screw M.

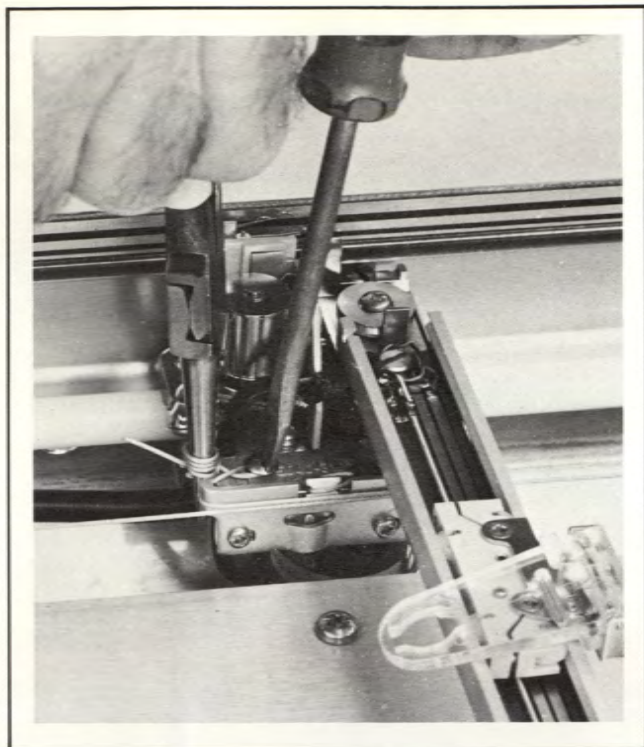


FIGURE 3-11. X-AXIS CABLE TIGHTENING

- o. Place one turn around screw M in a clockwise direction passing cable under itself.
- p. Tighten screw lightly.
- q. Make stringing taut. To make taut, grasp end of cable with a pair of long nose pliers placing several turns around end. Using motor block for support, continue wrapping cable around pliers until cable is taut (see Figure 3-11).
- r. Tighten screw M securely and check tension per paragraph 3-32. Cut off remaining portion of cable leaving approximately 1/2 inch.
- s. Replace paper alignment bar and platen.
- t. Tighten screw G.
- u. Align Y-axis (see paragraph 3-42).

3-32. X-AXIS CABLE TENSION CHECK. X cable tension should be verified by measuring the force required to displace it at a given distance. With the arm at the extreme right, measure the force required to displace the center of the longest span of the cable 1/4 inch past the vertical wall of the motor assembly trough. The measured force must be between the limits of 14 ounces and 18 ounces (see Figure 3-12).

3-33. X-AXIS CABLE TENSION ADJUSTMENT. X-axis cable tension can be adjusted by moving the two pulleys nearest the X-slidewire in their elongated mounting holes. If enough adjustment is not present, restrung the X-axis per paragraph 3-31.

3-34. X-AXIS MYLAR DRIVE BELT TENSION CHECK. The force required to move the carriage arm with the motor pulley held stationary should be between 6 and 7 pounds (see Figure 3-13). To adjust see paragraph 3-35.

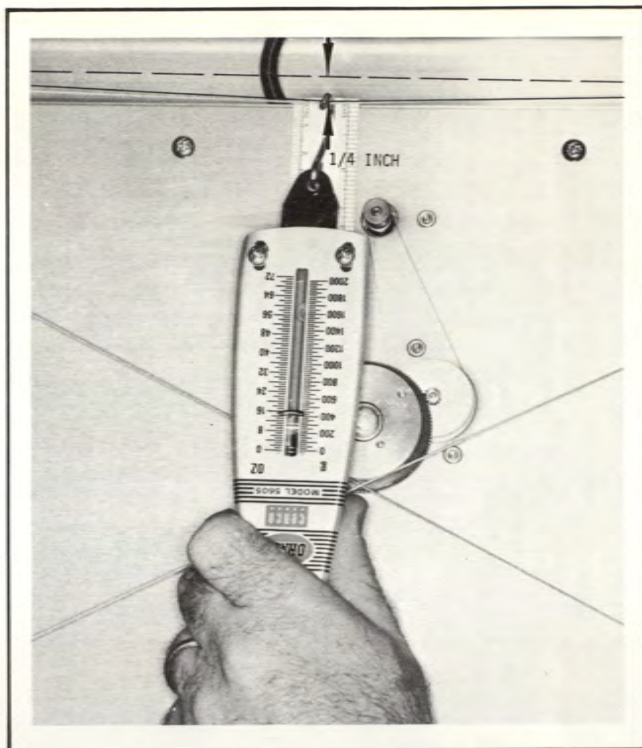


FIGURE 3-12. X-AXIS CABLE TENSION CHECK

3-35. X-AXIS MYLAR BELT REPLACEMENT. The X-axis mylar belt may be replaced as follows:

- a. Remove platen.
- b. Raise hinged top casting and loosen screws holding motor, eccentric adjustment, and drive sheave. **DO NOT REMOVE.**
- c. Close top and lift belt off servo pulley.

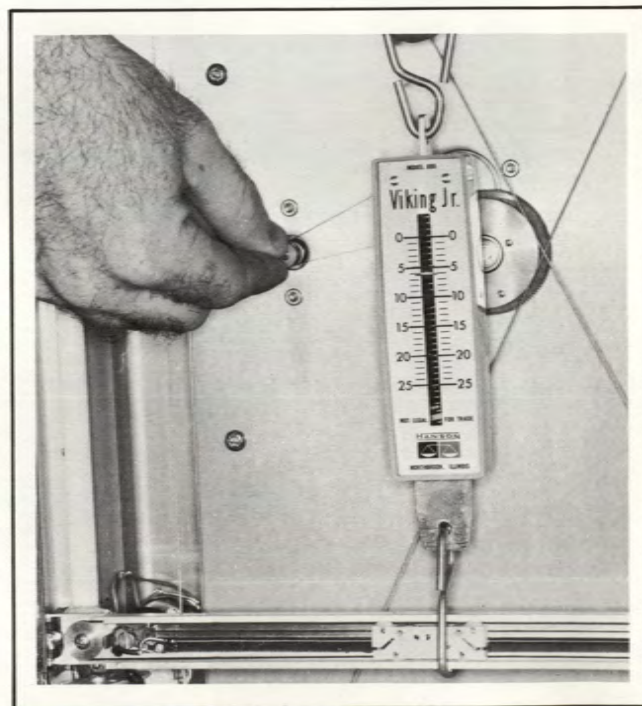


FIGURE 3-13. X-AXIS BELT TENSION CHECK

d. Tilt drive sheave to slip mylar belt off pulley eccentric on eccentric adjustment.

e. Install new belt (Part No. 1500-0216).

f. Tighten screw holding eccentric adjustment and drive sheave.

g. Turn plotter ON and pull X off null until the motor spins freely.

h. Adjust the motor position to achieve the proper belt tension (see paragraph 3-34).

i. Tighten motor screws.

j. Readjust backlash (paragraph 3-39).

k. Replace platen and rear hood.

3-36. X-AXIS DRIVE TRAIN BEARING REPLACEMENT (see Figure 3-14). To replace any of the X-axis drive bearings, the X-axis drive cable must be partially or completely removed, depending on which bearing is affected.

a. To replace a pulley bearing, proceed as follows:

1. Remove rear hood and platen.

2. Move pen carriage to its extreme position away from the affected pulley.

3. Apply masking tape to remaining pulleys and drive sheave so as to prevent cable from slipping off when tension is removed.

4. Raise hinged top casting.

5. While holding pulley nut on bottom side, remove No. 6-32 screw mounting pulley and remove pulley and its mounting stud.

6. Press out defective bearing and replace with a new bearing (Part No. 1410-0215).

7. Reassemble plotter, making sure that pulley is reinstalled with same side up.

8. Check cable tension per paragraph 3-32.

b. To replace drive sheave bearings, proceed as follows:

1. Remove rear hood and platen.

2. Remove X-axis drive cable.

3. Remove retaining ring and slip sheave/gear assembly upwards and off of stud.

4. Separate gear from sheave by removing four No. 2-56 flat head mounting screws.

5. Push bearings (2) out bottom of sheave and replace defective bearing(s) with a new bearing (Part No. 1410-0277).

6. Reassemble and restring X-axis (see paragraph 3-29).

7. Readjust backlash (paragraph 3-39).

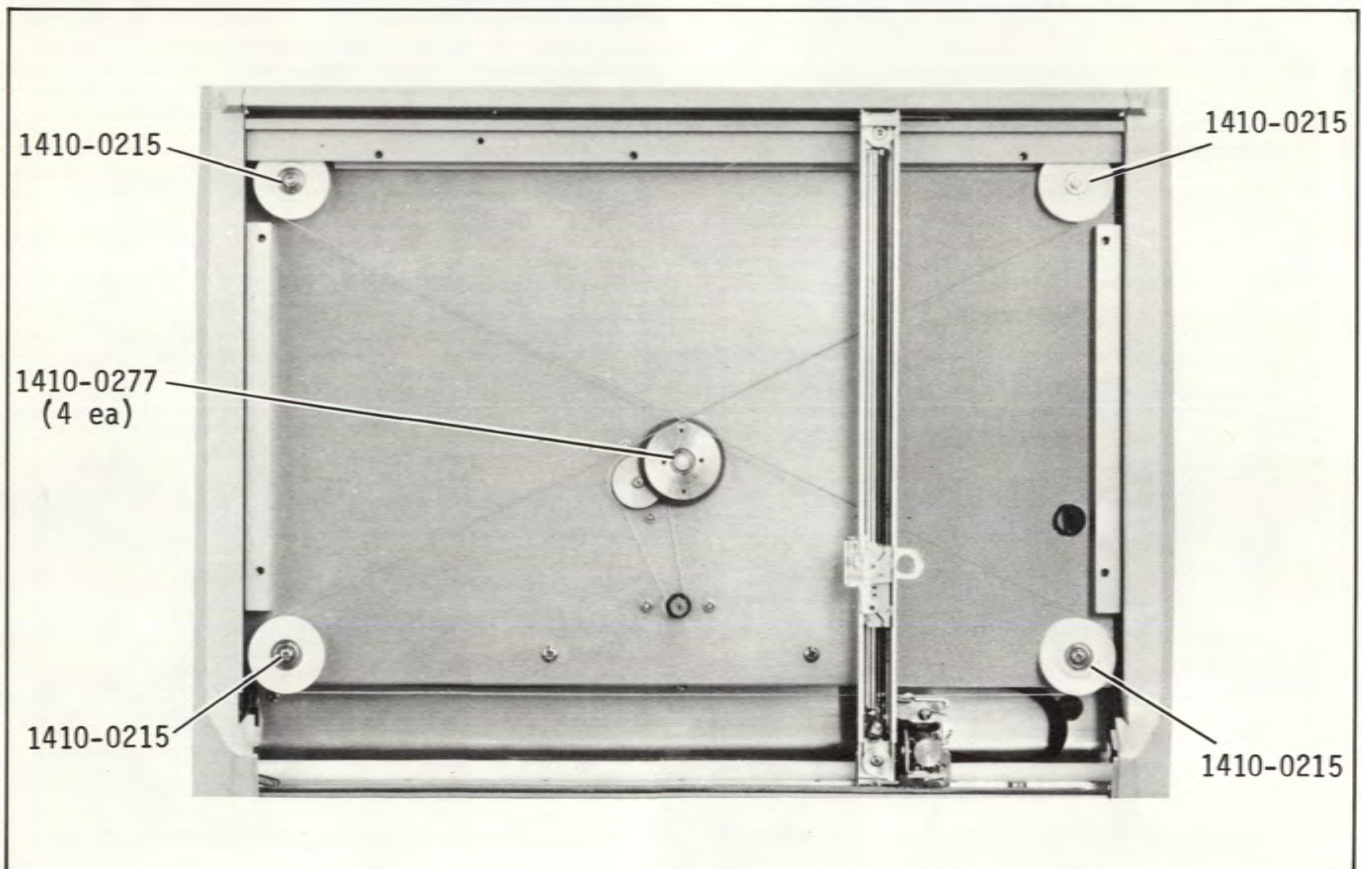


FIGURE 3-14. X-AXIS DRIVE TRAIN BEARING LOCATIONS

c. Replace belt pulley bearings as follows:

1. Remove rear hood and platen.
2. Raise top hinged casting.
3. Loosen motor clamping screw (Figure 3-15) and rotate motor until the belt is as loose as possible.
4. Remove two clamps holding pulley housing, slip drive belt off of pulley and pull assembly out of its hole from bottom.
5. Remove retaining ring from belt pulley shaft and slide shaft out of housing.
6. Remove defective bearing(s) and replace with a new bearing (Part No. 1410-0277).
7. Reassemble and reinstall pulley and adjust belt tension.
8. Reassemble plotter.

3-37. MECHANICAL ADJUSTMENTS

3-38. Y-AXIS PEN CARRIAGE ADJUSTMENT.

- a. Pen carriage rolls in carriage arm on four plastic rollers. To adjust rollers, remove rear hood, rotate black tab at upper end of scale 90° counterclockwise, pull pen holder back, and open scale. Move pen carriage to bottom of arm so that 2-56 setscrew in carriage is aligned with notch in side of arm (see Figure 3-16). Adjust setscrew to minimize side-play of carriage within arm.
- b. Move pen block to the upper end of arm so as to align upper setscrew with notch at upper end of arm, and repeat operation.



FIGURE 3-15. Y-AXIS MOTOR CLAMP SCREW

NOTE

Care should be taken not to adjust out all side-play. This will cause mechanical drag and result in a poor trace.

3-39. Y-AXIS BACKLASH ADJUSTMENT. There are two gear meshes involved in the Y axis drive system. They must be adjusted in the proper sequence for best results. The backlash of the gear drive system may be adjusted as follows:

- a. Remove rear hood.
- b. Snap pen lift solenoid out of its holder.
- c. Move arm to left until the rear adjusting setscrew at rear of motor block is in line with large access hole in rear wall.
- d. Loosen gear locking screw in upper left corner of pen motor block.
- e. Lightly pushing idler gear toward pen drive, turn adjusting screw in or out to attain minimum backlash between the two gears (see Figure 3-17).
- f. Tighten gear locking screw.
- g. Slightly loosen motor clamping screw located in center of motor block. Rotate motor slightly, first in one direction and then the other, while moving pen gear back and forth, until motor pinion rotates freely with minimum backlash. This procedure varies mesh between motor pinion and pen drive gear due to an eccentric mounting shoulder. A slight amount of backlash is desirable for optimum operation.
- h. Tighten motor clamping screw and recheck for optimum backlash.
- i. Reassemble plotter.

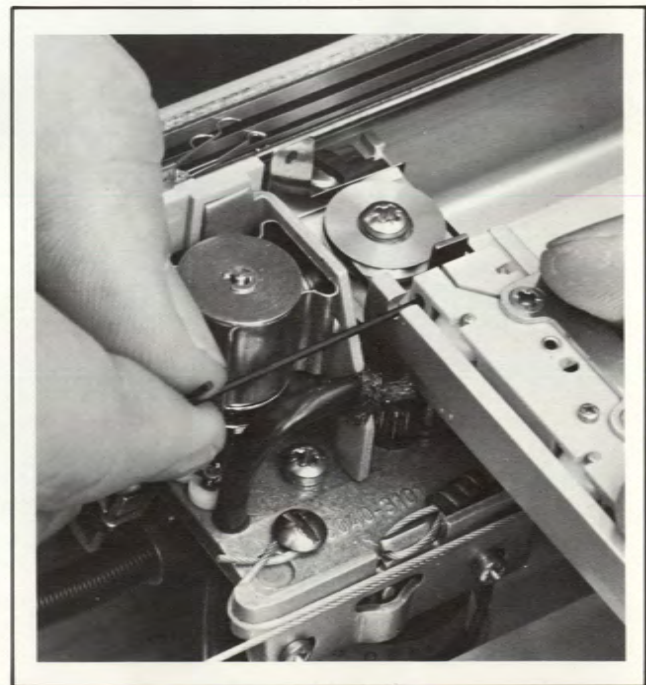


FIGURE 3-16. PEN CARRIAGE ADJUSTMENT

3-40. X-AXIS TRACK BEARING ADJUSTMENT. Adjustment of the X-axis track bearing is accomplished as follows:

- a. Remove rear hood, and raise top casting.

CAUTION

Care must be taken not to damage power connectors on fuse holder when tilted too far back.

- b. Move pen arm until it is opposite access slot (see Figure 3-18).
- c. Using screwdriver, turn bearing adjusting screw until slight amount of clearance is detectable between five ball bearing rollers and track rod.
- d. Reassemble recorder.

CAUTION

Do not overtighten this adjustment. This could result in bearing damage or failure.

3-41. X GEAR TRAIN BACKLASH ADJUSTMENT. Backlash is the amount of distance one gear tooth may move before encountering another gear face. The adjustment should accomplish minimal backlash with no binding. Backlash of the gear drive system may be adjusted as follows:

- a. Remove platen.
- b. Raise hinged top casting.
- c. Loosen two screws securing the eccentric adjustment (Knurled Knob, Figure 3-19).



FIGURE 3-17. Y-AXIS GEAR TRAIN BACKLASH ADJUSTMENT

d. Move arm back and forth in short strokes and adjust eccentric by turning Knurled Knob until there is no discernible backlash. If backlash is too tight, a grinding sound will be evident when moving the arm a distance. If backlash is too loose a knocking or clicking sound will be apparent.

- e. Tighten screws and replace platen.

3-42. Y-AXIS ALIGNMENT. The Y axis may be aligned as follows:

- a. Remove rear hood.
- b. Raise hinged top casting and loosen screw securing stringing on lower slider bracket.
- c. Loosen the two screws securing Y arm to motor block.
- d. Install sheet of graph paper.
- e. Place pen at 10 in. on Y and 7.5 in. on X.
- f. Enter 0 in both registers of the 9100.
- g. Press FMT ↓.
- h. Enter 0 into X register and -5000 into Y register of 9100.
- i. Press FMT ↓. Line drawn should be parallel to Y axis grid lines (0.01 in. max). If not, move lower end of arm to right or left to effect alignment.
- j. Tighten screws on motor block and tighten screw securing stringing on lower slider bracket.

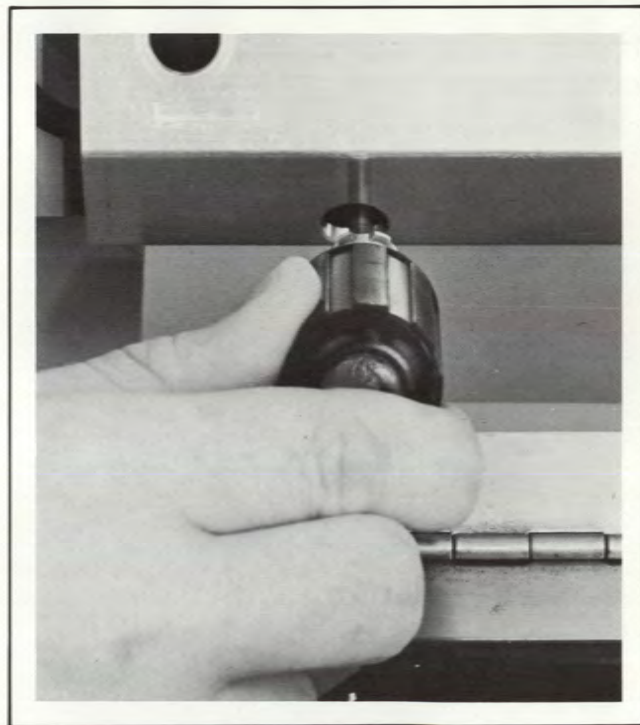


FIGURE 3-18. X-AXIS TRACK BEARING ADJUSTMENT

3-43. X-AXIS ALIGNMENT. The X-axis may be aligned as follows:

a. Loosen two end screws on paper alignment bar. Remove two No. 6-32 screws at bottom edge of platen and loosen the other four platen screws.

b. Place a sheet of graph paper on recorder.

c. Put pen at 0 in. on X axis and 5 in. on Y axis.

d. Enter 0 into both registers of 9100 and press FMT ↓.

e. Enter 7500 into X register of calculator, 0 into Y register and press FMT ↓. If line drawn is not parallel to X axis move one end of paper alignment bar up or down to effect alignment (0.01 in. max).

f. Replace screws in table and tighten screws in paper alignment bar.

3-44. PERFORMANCE CHECKS

3-45. INTRODUCTION. The following performance checks and adjustments are made with the 9125A coupled to a properly working 9100A or 9100B Calculator.

3-46. INSTRUMENT ON.

3-47. CONTROL SETTINGS.

a. Set the 9125A controls as follows:

SERVO	STANDBY
ORIGIN (X & Y)	Mid-range (5 turns from clockwise stop)
SCALE VERNIER (X & Y)	Mid-range
CHART	RELEASE

b. Set the 9100A/B controls as follows:

POWER	OFF
RADIANS/DEGREES	DEGREES
FIXED/FLOATING	FLOATING
PROGRAM/RUN	RUN
DECIMAL DIGITS	6

3-48. POWER APPLICATION. Turn the 9100A/B Calculator on. Check visually for indications of overheating and component failure.

3-49. FUNCTIONAL CHECK.

3-50. INSTALL PAPER. Place an 11 in. x 17 in. chart with a 10 in. x 15 in. (25 x 38 cm) grid chart on the plotting surface and set CHART to HOLD. Set SERVO to ON.

3-51. INITIAL POSITIONING. Press STOP. Pen should be near the center of the plotting surface. Horizontal and vertical servos should have a "tight notch."

3-52. ORIGIN SHIFT. Rotate ORIGIN controls over entire range. Pen should position anywhere on the plotting surface. Return pen to the center of the grid and depress PEN MANUAL DOWN switch several times to mark the origin of the plot. Observe that no movement occurs in either the X or Y axis as this switch is actuated.

3-53. CARRIAGE ADJUSTMENT CHECK. Adjust the ORIGIN controls over their entire range. Listen for unusually loud servo response, i. e., scraping, squeaking, or humming sounds. Pen should respond smoothly to a smooth adjustment of the ORIGIN controls.

3-54. INTERFACE AND CONTROL CIRCUITS.

a. Enter the Preliminary Functional Check Program A (Figure 3-20) into the 9100A Calculator.

b. Press END. Press CONTINUE.

c. Compare the plot obtained with Figure 3-21. The perimeter of the rectangle plotted should be located within each quadrant as indicated. Program should end with the pen up, positioned in the center as was set in paragraph 3-52. IMPROPER DATA light should be on.

3-55. POWER SUPPLY ADJUSTMENTS. Measure the power supply voltages with an HP 3460 Digital Voltmeter, monitoring the points indicated on next page in Table 3-2.

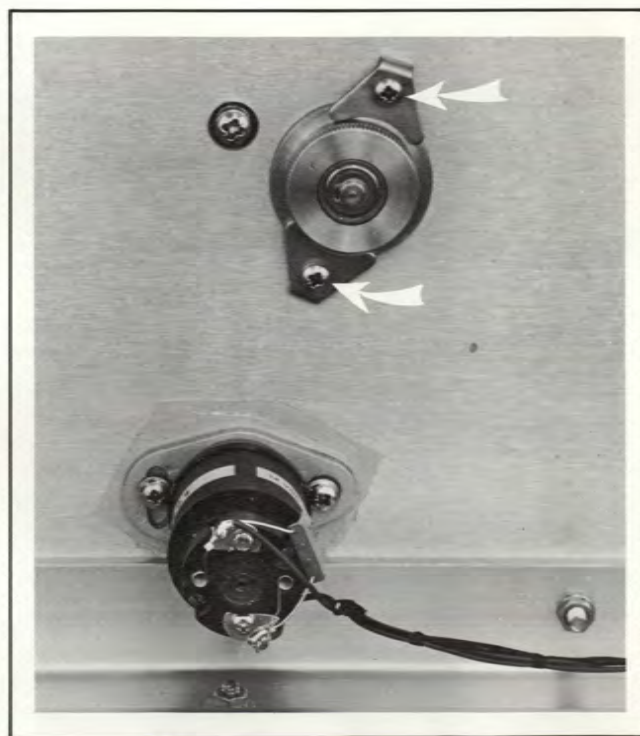


FIGURE 3-19. X-AXIS GEAR TRAIN BACKLASH ADJUSTMENT

TABLE 3-2. POWER SUPPLY ADJUSTMENTS

SUPPLY	MONITOR	ADJUSTMENT	OUTPUT LIMITS
-15 V	A1 (-15 V)	A10R11	-15 Vdc ± 0.1 Vdc
+6.2 V	A1 (6.2 V)	-	+6.2 Vdc ± 0.62 Vdc
-2.5 V		-	-2.5 Vdc ± 0.25 Vdc
Above referenced to digital ground, A1 (ground). See Figure 3-22.			
-9 V (X DAC)	A6 (-9 V)	A6R6	-9 Vdc ± 0.01 Vdc
-9 V (Y DAC)	A7 (-9 V)	A7R6	-9 Vdc ± 0.01 Vdc
Above referenced to the respective DAC ground buss. See Figure 3-22.			
-30 V (X Amp)	A8 (-30V)	-	-29.4 Vdc ± 2.0 Vdc
+30 V (Y Amp)	A8 (+30V)	-	+29.4 Vdc ± 2.0 Vdc
-30 V (X Amp)	A9 (-30V)	-	-29.4 Vdc ± 2.0 Vdc
+30 V (Y Amp)	A9 (+30V)	-	+29.4 Vdc ± 2.0 Vdc
Above referenced to the respective axis amplifier common (see Figures 3-22 and 3-23).			

3-56. SLIDEWIRE REFERENCE SUPPLY ADJUSTMENTS. Perform the following tests with the HP 3460B DVM monitoring the points indicated in Table 3-3. Set the SERVO switch to STANDBY. X amplifier A8 may be removed while performing the adjustments on the Y amplifier A9. See Figures 3-22 and 3-23 for locations of test points and adjustments.

CAUTION

Use a floating ground on the DVM; polarity is not important.

3-57. TIMER ADJUSTMENTS. Measure the timer intervals with HP 140B Scope. Trigger the scope on the negative edge of the indicated timer output and measure the interval to the next positive edge.

3-58. SHORT TIMER.

a. Enter the Timer Program (Figure 3-24) into the calculator.

b. Press END.

c. Press CONTINUE.

d. Monitor the short timer output at test point FTS relating to ground on same circuit board, and adjust the interval to 90 ms ± 20 ms, using A2R15 (see Figure 3-22).

3-59. LONG TIMER. Monitor the long timer output at test point FTL and adjust the interval to 1.02 second ± 0.02 second, using A2R5 (see Figure 3-22).

3-60. DAC ALIGNMENT.

a. The DAC alignment will be accomplished by entering the DAC alignment program (Figure 3-25) into the calculator. Press END.

b. Use the 3460 DVM to make all DAC output voltage measurements. Connect the negative lead to DA terminal (see Figure 3-22) and positive lead to the ground buss on the appropriate DAC.

c. The sequence of steps a through k indicated on the following page will be provided by the program. Advancement to the indicated transfer may be accomplished by pressing SET FLAT and then CONTINUE until the desired transfer point is reached. The transfer may be repeated as required by pressing CONTINUE. After step k, the program returns to step a and may be repeated as required.

STEP	COMMAND	CODE
0-0	CLR	20
0-1	FMT	42
0-2	↓	25
0-3	FMT	42
0-4	↑	27
0-5	2	02
0-6	0	00
0-7	0	00
0-8	0	00
0-9	CH SIGN	32
0-a	↑	27
0-b	CH SIGN	32
0-c	FMT	42
0-d	↓	25
1-0	↑	27
1-1	FMT	42
1-2	↓	25
1-3	CH SIGN	32
1-4	FMT	42
1-5	↓	25
1-6	↑	27
1-7	FMT	42
1-8	↓	25
1-9	CH SIGN	32
1-a	FMT	42
1-b	↓	25
1-c	ENT EXP	26
1-d	6	06
2-0	↑	27
2-1	FMT	42
2-2	↓	25
2-3	END	

FIGURE 3-20. PRELIMINARY FUNCTIONAL CHECK PROGRAM A

TABLE 3-3. SLIDEWIRE REFERENCE SUPPLY ADJUSTMENT

ORIGIN CONTROL AND SETTING	MONITOR	ADJUSTMENT	OUTPUT LIMITS
Extreme CCW	A9 (S. W.)	A9R34	2.05 Vdc $\pm$ 0.003 Vdc
Extreme CW	A9 (S. W.)	A9R34	2.05 Vdc $\pm$ 0.003 Vdc
Extreme CCW	A8 (S. W.)	A8R34	3.07 Vdc $\pm$ 0.003 Vdc
Extreme CW	A8 (S. W.)	A8R34	3.07 Vdc $\pm$ 0.003 Vdc

TABLE 3-4. X DAC ALIGNMENT

STEP	CONTENTS OF X AND Y DISPLAY REGISTER	ALIGNMENT INSTRUCTION (SEE FIGURE 3-22)
1	0	Adjust A6R6 for 0 Vdc $\pm$ 100 μ V DAC output.
2	999	Record DAC output.
3	1000	Adjust A6R198, 1000 F/F, for DAC output of previous step +400 μ V $\pm$ 250 μ V.
4	Repeat step 2	Repeat step 2.
5	Repeat step 3	Repeat step 3.
6	1999	Record DAC output.
7	2000	Adjust A6R10, 2000 F/F, for DAC output of previous step +400 μ V $\pm$ 250 μ V.
8	Repeat step 6	Repeat step 6.
9	Repeat step 7	Repeat step 7.
10	3999	Record DAC output.
11	4000	Adjust A6R8, 400 F/F, for DAC output of previous step +400 μ V $\pm$ 250 μ V.
12		Repeat steps 1, 2, 3, 6, 7, 10, and 11 to verify alignment.

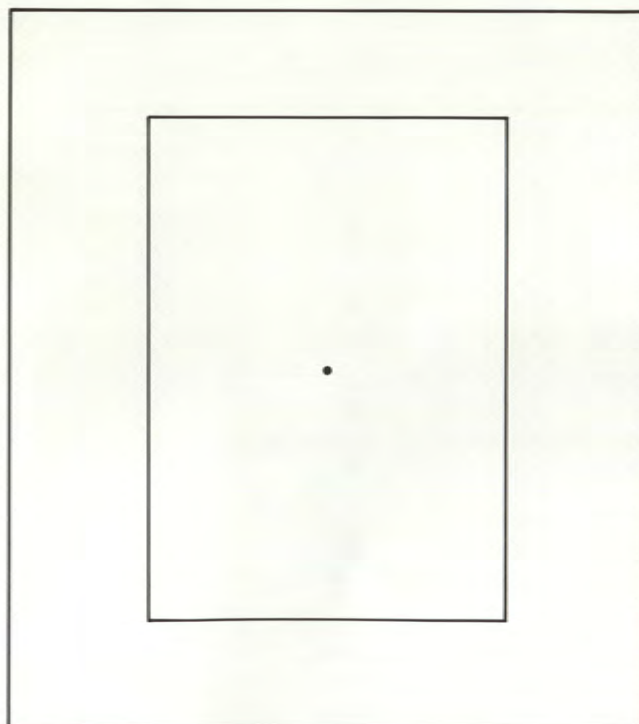


FIGURE 3-21. FUNCTIONAL CHECK GRAPH PROGRAM A

3-61. X DAC ALIGNMENT. Table 3-4 shows the steps necessary for X DAC alignment.

3-62. Y DAC ALIGNMENT. Repeat procedures as in Table 3-4 for the Y DAC. Change adjustment prefix from A6R--- to A7R---.

3-63. VECTOR GENERATION ALIGNMENT.

3-64. DEADBAND VERIFICATION.

a. Set the 9125A and 9100A/B controls as indicated in paragraph 3-47.

b. Check the X-axis deadband by carefully moving the carriage away from its null position approximately 1/8 inch and then allowing the servo amplifier to again seek its null. Place some pressure on the carriage to provide a slow return to null rather than a sudden step-function return.

c. Draw a reference line of this X position by using the Y axis ORIGIN control.

d. Repeat steps b and c while displacing the carriage in the opposite direction.

e. Repeat the above steps several times in each direction and then observe the total displacement between adjoining segments. This displacement must be within ± 0.005 inch.

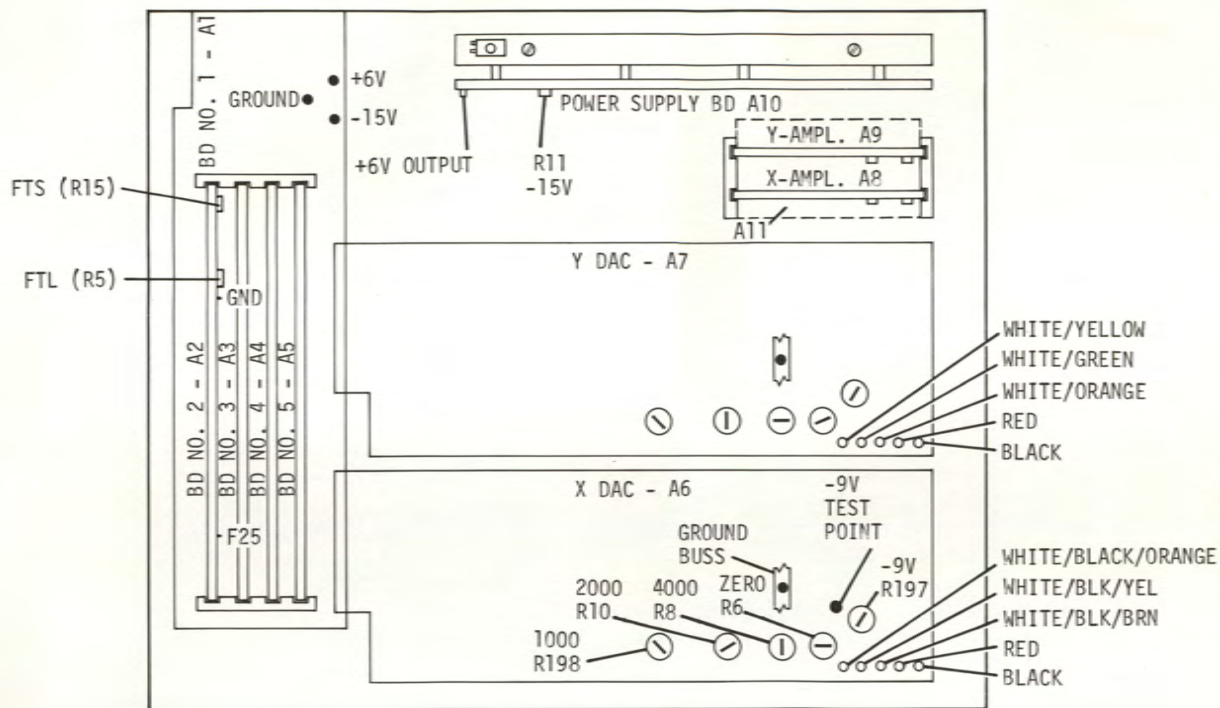


FIGURE 3-22. CARD LOCATION GUIDE

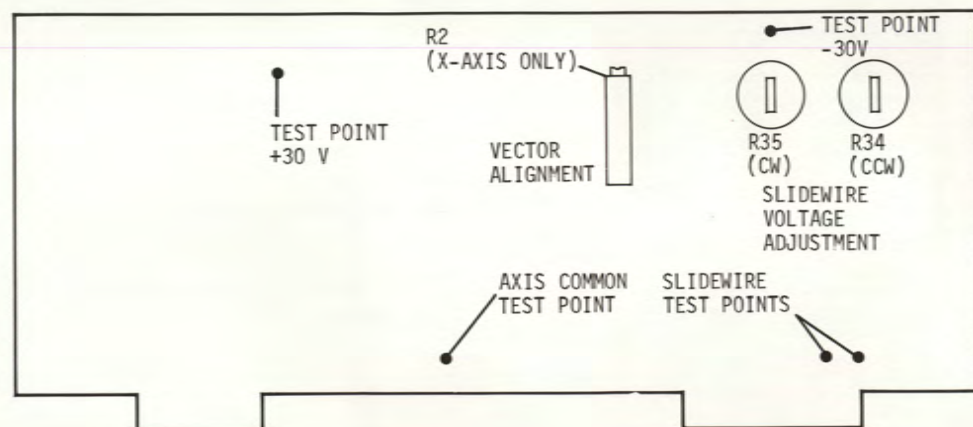


FIGURE 3-23. AXIS AMPLIFIER (X OR Y)

f. Repeat the above procedure for the Y axis, using the X ORIGIN control to provide the reference lines.

3-65. VECTOR ALIGNMENT PRELIMINARY. Set the control settings as follows:

- a. Press STOP.
- b. Press END.
- c. Enter Vector Alignment Program (Figure 3-26) into the calculator.
- d. Set the ORIGIN controls for Y = 1 inch, X = 1 inch.

3-66. FILTER MATCHING.

- a. Press CONTINUE.
- b. Adjust A8R2 on X axis amplifier board to close retrace plot. One retrace plot will be drawn each time CONTINUE is pressed.
- c. As the retrace closes, additional resolution will be required to accomplish specified accuracy. This may be obtained from the program by pressing SET FLAG and then CONTINUE.
- d. CONTINUE may now be pressed to provide adjacent parallel lines which may be compared as final adjustment is accomplished.
- e. Final adjustment is complete when maximum spread of retrace lines is within ± 0.040 inch plus one pen width.

3-67. LINEARITY.

- a. Enter the linearity program (Figure 3-27) into the calculator.

STEP	COMMAND	CODE
0-0	CLR	20
0-1	FMT	42
0-2	↓	25
0-3	FMT	42
0-4	↑	27
0-5	GO TO	44
0-6	0	00
0-7	0	00
0-8	END	

FIGURE 3-24. TIMER PROGRAM

b. Press CONTINUE; the pen will go to the origin and drop. Set the ORIGIN controls so the pen is exactly at 0, 0 (lower left corner).

c. Press CONTINUE; the pen will go to full scale. Set the SCALE VERNIER controls so that the pen is exactly at the grid marks at the upper left corner.

d. Press CONTINUE; the pen will drop and mark a point at each major grid division. The point should be at the major division ± 0.010 inch.

3-68. FUNCTIONAL TEST.

3-69. CONTROL SETTINGS. Set the control settings as follows:

- a. Set ORIGIN to lower left corner of plot.
- b. Enter 5000 into the 9100A/B X and Y registers.
- c. Press FMT ↑.
- d. Adjust SCALE VERNIER to align pen with the Y = 10 in. and X = 10 in. coordinate.

3-70. FINAL TEST.

- a. Press STOP.
- b. Press END.
- c. Enter Functional Test Program B (Figure 3-28) into the calculator.
- d. Set ORIGIN to X = 5 in, Y = 5 in.
- e. Press CONTINUE.
- f. Enter 2500 into the calculator X register.
- g. Press CONTINUE.
- h. The resulting plot should have a radius of 5 inches. All spokes should extend to the adjacent chord intercepts. The spoke retrace patterns should overlay one another with a maximum spread of ± 0.040 inches plus one pen width.
- i. Set the X ORIGIN to 4.5 in.
- j. Press CONTINUE.
- k. The resulting plot should resemble that of Figure 3-29. Observe that the maximum spread of the retrace pattern forming the sides of the diamond does not exceed 0.040 in. and that end points are within 0.020 in. (see Figure 3-29).

STEP	COMMAND	CODE	STEP	COMMAND	CODE
0-0	CLR	20	2-6	3	03
0-1	FMT	42	2-7	↑	27
0-2	↓	27	2-8	FMT	42
0-3	STOP	41	2-9	↑	27
0-4	9	11	2-a	STOP	41
0-5	9	11	2-b	IF FLAG	43
0-6	9	11	2-c	3	03
0-7	↑	27	2-d	3	03
0-8	FMT	42	3-0	GO TO	44
0-9	↑	27	3-1	1	01
0-a	STOP	41	3-2	a	13
0-b	1	01	3-3	3	03
0-c	ENT EXP	26	3-4	9	11
0-d	3	03	3-5	9	11
1-0	↑	27	3-6	9	11
1-1	FMT	42	3-7	↑	27
1-2	↑	27	3-8	FMT	42
1-3	STOP	41	3-9	↑	27
1-4	IF FLAG	43	3-a	STOP	41
1-5	1	01	3-b	4	04
1-6	a	13	3-c	ENT EXP	26
1-7	GO TO	44	3-d	3	03
1-8	0	00	4-0	↑	27
1-9	4	04	4-1	FMT	42
1-a	1	01	4-2	↑	27
1-b	9	11	4-3	STOP	41
1-c	9	11	4-4	IF FLAG	43
1-d	9	11	4-5	0	00
2-0	↑	27	4-6	0	00
2-1	FMT	42	4-7	GO TO	44
2-2	↑	27	4-8	3	03
2-3	STOP	41	4-9	3	03
2-4	2	02	4-a	END	
2-5	ENT EXP	26			

FIGURE 3-25. DAC ALIGNMENT

STEP	COMMAND	CODE	STEP	COMMAND	CODE	STEP	COMMAND	CODE
0-0	CLR	20	1-4	0	00	2-8	FMT	42
0-1	FMT	42	1-5	0	00	2-9	↓	25
0-2	↓	25	1-6	CLR	20	2-a	RCL	61
0-3	2	02	1-7	ACC +	60	2-b	X↻Y	30
0-4	5	05	1-8	RCL	61	2-c	0	00
0-5	0	00	1-9	X↻Y	30	2-d	X↻Y	30
0-6	0	00	1-a	0	00	3-0	FMT	42
0-7	↑	27	1-b	X↻Y	30	3-1	↓	25
0-8	FMT	42	1-c	FMT	42	3-2	2	02
0-9	↓	25	1-d	↓	25	3-3	5	05
0-a	CLR	20	2-0	STOP	41	3-4	0	00
0-b	FMT	42	2-1	↑	27	3-5	↑	27
0-c	↓	25	2-2	2	02	3-6	PAUSE	57
0-d	STOP	41	2-3	5	05	3-7	PAUSE	57
1-0	IF FLAG	43	2-4	0	00	3-8	GO TO	44
1-1	1	01	2-5	0	00	3-9	1	01
1-2	6	06	2-6	+	33	3-a	7	07
1-3	GO TO	44	2-7	X↻Y	30	3-b	END	

FIGURE 3-26. VECTOR ALIGNMENT

STEP	COMMAND	CODE
0-0	CLR	20
0-1	FMT	42
0-2	↓	25
0-3	STOP	41
0-4	5	05
0-5	0	00
0-6	0	00
0-7	0	00
0-8	↑	27
0-9	7	07
0-a	5	05
0-b	0	00
0-c	0	00
0-d	FMT	42
1-0	↑	27
1-1	FMT	42
1-2	↓	25
1-3	STOP	41
1-4	CLR	20
1-5	FMT	42
1-6	↑	27
1-7	5	05
1-8	0	00
1-9	0	00
1-a	X TO ()	23
1-b	a	13
1-c	+	33
1-d	↓	25
2-0	↑	27
2-1	FMT	42
2-2	↓	25
2-3	FMT	42
2-4	↑	27

STEP	COMMAND	CODE
2-5	5	05
2-6	0	00
2-7	0	00
2-8	0	00
2-9	X = Y	50
2-a	3	03
2-b	2	02
2-c	a	13
2-d	GO TO	44
3-0	1	01
3-1	c	16
3-2	R ↑	22
3-3	a	13
3-4	+	33
3-5	R ↓	31
3-6	FMT	42
3-7	↓	25
3-8	FMT	42
3-9	↑	27
3-a	R ↑	22
3-b	7	07
3-c	5	05
3-d	0	00
4-0	0	00
4-1	X = Y	50
4-2	4	04
4-3	8	10
4-4	a	13
4-5	GO TO	44
4-6	3	03
4-7	4	04
4-8	END	

FIGURE 3-27. LINEARITY

STEP	COMMAND	CODE	STEP	COMMAND	CODE
0-0	CLR	20	4-6	3	03
0-1	STOP	41	4-7	6	06
0-2	X→	23	4-8	0	00
0-3	a	13	4-9	CH SIGN	32
0-4	CLR X	37	4-a	X = Y	50
0-5	↑	27	4-b	5	05
0-6	FMT	42	4-c	2	02
0-7	↓	25	4-d	GO TO	44
0-8	e	12	5-0	3	03
0-9	↑	27	5-1	a	13
0-a	a	13	5-2	CLR	20
0-b	TO RECT	66	5-3	FMT	42
0-c	FMT	42	5-4	↓	25
0-d	↓	25	5-5	FMT	42
1-0	e	12	5-6	↑	27
1-1	↑	27	5-7	STOP	41
1-2	2	02	5-8	X > Y	53
1-3	0	00	5-9	X→	23
1-4	+	33	5-a	a	13
1-5	Y→	40	5-b	CLR X	37
1-6	e	12	5-c	FMT	42
1-7	3	03	5-d	↓	25
1-8	5	05	6-0	a	13
1-9	1	01	6-1	CH SIGN	32
1-a	X > Y	53	6-2	↑	27
1-b	0	00	6-3	CLR X	37
1-c	4	04	6-4	FMT	42
1-d	CLR	20	6-5	↓	25
2-0	FMT	42	6-6	CLR	20
2-1	↓	25	6-7	a	13
2-2	FMT	42	6-8	FMT	42
2-3	↑	27	6-9	↓	25
2-4	a	13	6-a	X↻Y	30
2-5	TO RECT	66	6-b	FMT	42
2-6	FMT	42	6-c	↓	25
2-7	↓	25	6-d	X↻Y	30
2-8	TO POLAR	62	7-0	CH SIGN	32
2-9	2	02	7-1	FMT	42
2-a	0	00	7-2	↓	25
2-b	↑	27	7-3	X↻Y	30
2-c	ACC +	60	7-4	FMT	42
2-d	RCL	61	7-5	↓	25
3-0	3	03	7-6	X↻Y	30
3-1	6	06	7-7	FMT	42
3-2	0	00	7-8	↓	25
3-3	X < Y	52	7-9	CH SIGN	32
3-4	3	03	7-a	X↻Y	30
3-5	9	11	7-b	FMT	42
3-6	GO TO	44	7-c	↓	25
3-7	2	02	7-d	X↻Y	30
3-8	4	04	8-0	FMT	42
3-9	CLR	20	8-1	↓	25
3-a	a	13	8-2	CH SIGN	32
3-b	TO RECT	66	8-3	↑	27
3-c	FMT	42	8-4	CLR X	37
3-d	↓	25	8-5	FMT	42
4-0	TO POLAR	62	8-6	↓	25
4-1	2	02	8-7	↑	27
4-2	0	00	8-8	FMT	42
4-3	↑	27	8-9	↓	25
4-4	ACC -	63	8-a	FMT	42
4-5	RCL	61	8-b	↑	27
			8-c	END	

FIGURE 3-28. FUNCTIONAL TEST PROGRAM B

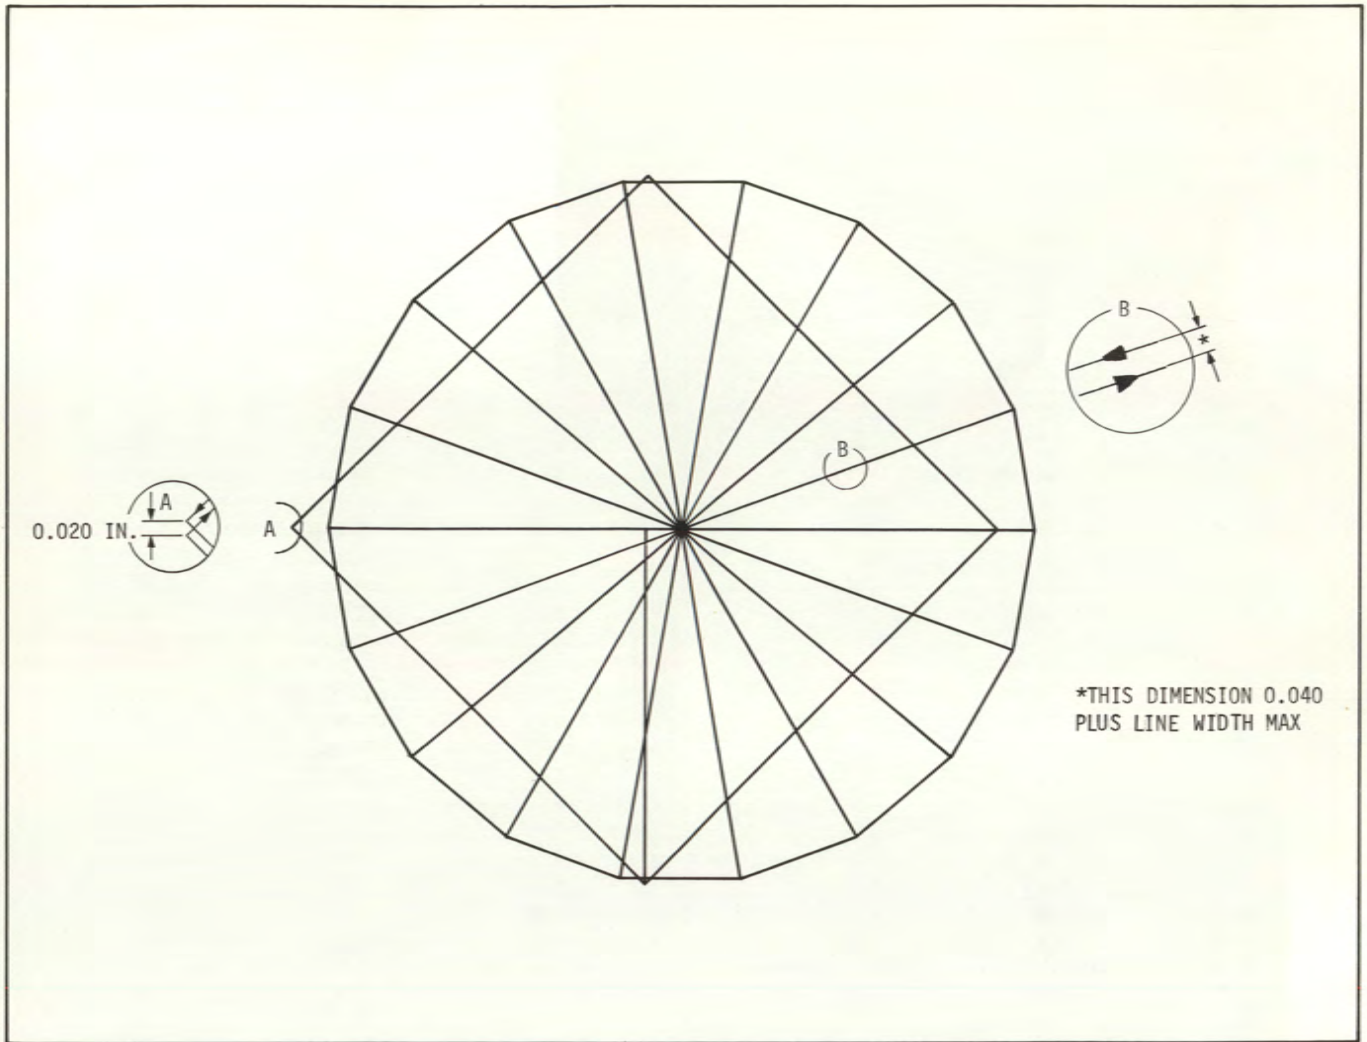


FIGURE 3-29. FUNCTIONAL TEST GRAPH PROGRAM B

SECTION IV

PARTS LIST

4-1. INTRODUCTION


4-2. This section contains mechanical and electrical parts lists. The mechanical parts list is supplemented by exploded views to aid in parts identification. Consistent with the maintenance and troubleshooting procedures presented in this manual, the electrical parts list indicates assemblies rather than individual components.

4-3. ORDERING INFORMATION

4-4. To obtain replacement parts, address order or inquiry to your local Hewlett-Packard Sales/Service Office (see rear of manual for address of nearest HP office). Order should include part number and description used in this section. If required part is not listed in this section, provide model and serial numbers, description of part, and function and location of part.

TABLE 4-1. PARTS LIST

<u>Accessory Kit (HP Part No. 09125-80130)</u>		
<u>HP Part No.</u>	<u>Description</u>	<u>Qty.</u>
5080-7979	Disposable Pen, red	Pkg of 3
5080-7980	Disposable Pen, blue	Pkg of 3
5080-3605	Cleaner, Slidewire	1 bottle
5080-3635	Lubricant, Slidewire	1 bottle
09125-90002	Diagnostic Card	1
2110-0201	Fuse, 0.25 A, SB (230 V only)	1
<u>Pens and Paper Supplies Available</u>		
<u>HP Part No.</u>	<u>Description</u>	
9270-1004	Chart Paper - English, Heavy	
9270-1005	Chart Paper - English, Light	
9270-1024	Chart Paper - Metric, Heavy	
9270-1042	Chart Paper - Metric, Light	
9280-0159	Chart Paper - Semilog Linear x 2 Cycle	
9280-0160	Chart Paper - Semilog Linear x 3 Cycle	
9280-0165	Chart Paper - Log Log 3 x 2 Cycle	
9280-0167	Chart Paper - Log Log 2 x 3 Cycle	
9280-0168	Chart Paper - 3 Cycle x Semilog Linear	
9280-0169	Chart Paper - 2 Cycle x Semilog Linear	
9280-0171	Chart Paper - Log Log 3 x 4 Cycle	
5080-7981	Disposable Pen - Green (Package of 3)	
5080-7994	Disposable Pen - Black (Package of 3)	
<u>Board Assemblies</u>		
<u>Circuit Symbol</u>	<u>HP Part No.</u>	<u>Description</u>
A6, A7	09125-80490	D to A Board - Rebuilt
A6, A7	09125-80020	D to A Board - New
A8	09125-80500	X Axis Amplifier Board - Rebuilt
A8	09125-80040	X Axis Amplifier Board - New
A9	09125-80510	Y Axis Amplifier Board - Rebuilt
A9	09125-80050	Y Axis Amplifier Board - New
A10	09125-80520	Power Supply Assembly - Rebuilt
A10	09125-80220	Power Supply Assembly - New
	09125-80530	Mechanical Assembly - Rebuilt
	09125-80140	Mechanical Assembly - New
A1	09125-80060	Mother Board, Main
A2	09125-80070	Interface Board No. 2
A3	09125-80080	Interface Board No. 3
A4	09125-80090	Interface Board No. 4
A5	09125-80100	Interface Board No. 5
A11	09125-80240	Mother Board, Amplifier
<u>Miscellaneous Parts</u>		
<u>HP Part No.</u>	<u>Description</u>	
0490-0705	Relay, DPDT, 12 V, 800 ohms	
2100-2019	Resistor, Variable, 1 k, 20%, 2W, 1 T (Scale Vernier)	
2100-2560	Resistor, Variable, 1k, 5%, 2W, 10 T (Origin)	
2110-0021	Fuse, 1.25 A, Slo Blow (Power Supply)	
2140-0018	Lamp - Neon, 115 V ac/dc (ac power)	
2140-0100	Lamp - Incandescent, 14 V, .08 A (Improper Data Format)	
3101-1179	Switch - Toggle, 2 PDT (Chart - Hold and Standby)	
07004-80290	Autogrip Power Supply	
09125-80250	Autogrip Table	
09125-80110	Calculator Connecting Cable Assembly	
09125-80260	Rear Hood Assembly	
09125-60330	Case Assembly - Top Casting	
09125-00320	Control Panel	
4040-0477	Dust Cover	

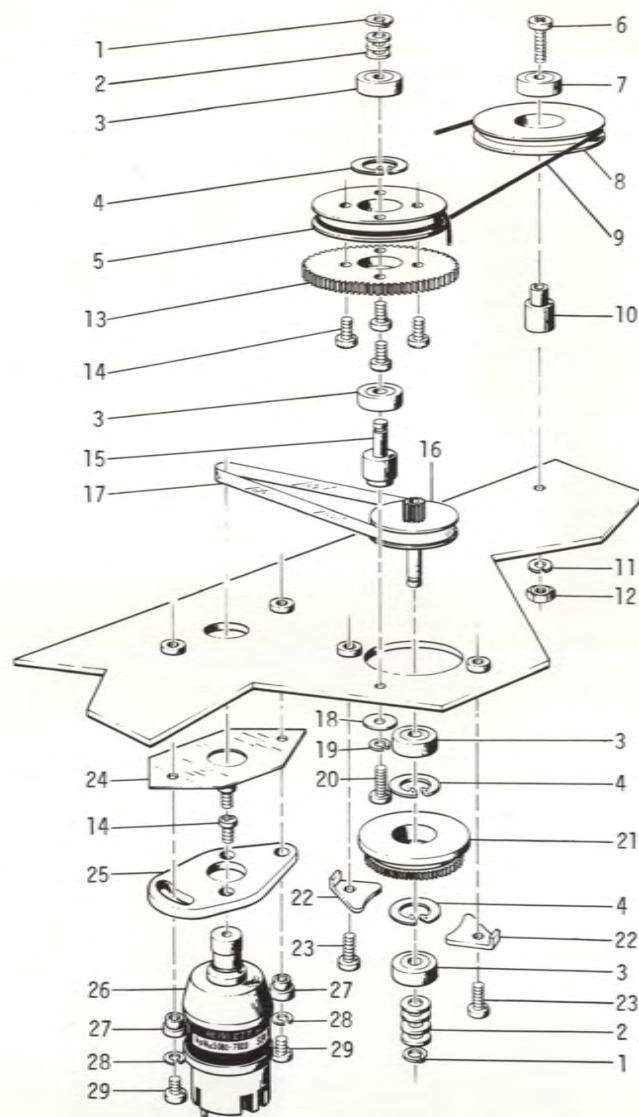

Item	HP Part No.	Description	Item	HP Part No.	Description
1	0510-0238	Ring-Retaining	16	07035-62160	Clutch Assembly, X-Axis
2	2190-0181	Washer-Shim, .550 Thk, SST	17	1500-0216	Belt-Drive
3	1410-0277	Bearing-Ball	18	3050-0399	Washer-Flat, No. 6
4	0510-0742	Ring-Retaining	19	2190-0105	Washer-Lock, No. 6
5	09125-20010	Sheave X-Axis	20	2460-0033	Screw-Mach, 6-32 x 5/16, PH, SST, PD
6	2460-0017	Screw-Mach, 6-32 x 3/4, PH, PD	21	07035-22120	Housing-Bearing
7	1410-0215	Bearing-Ball	22	07035-02090	Clamp-Housing
8	17999-06494	Pulley-Cable	23	2360-0062	Screw-Mach, 6-32 x 1/2, PH, SST, PD
9	5080-7717	X-Axis Restraining Kit	24	07035-22440	Insulator-Motor Plate
10	09125-20090	Stud-Pulley	25	07035-22450	Motor-Plate
11	2190-0007	Washer, No. 6, LK WASH	26	5080-7820	Motor Assembly
12	2420-0002	Nut-Hex, 6-32, SST	27	07035-22430	Washer-Motor Plate
13	07035-20940	Gear-Clutch, 123T, X-Axis	28	2190-0108	Washer-Lock, No. 4
14	0520-0065	Screw-Mach, 2-56 x 1/4, PH, SST, PD	29	2200-0048	Screw-Mach, 4-40 x 3/8, PH, SST, PD
15	09125-20130	Stud-Gear Mount			

FIGURE 4-1. X-AXIS DRIVE ASSEMBLY

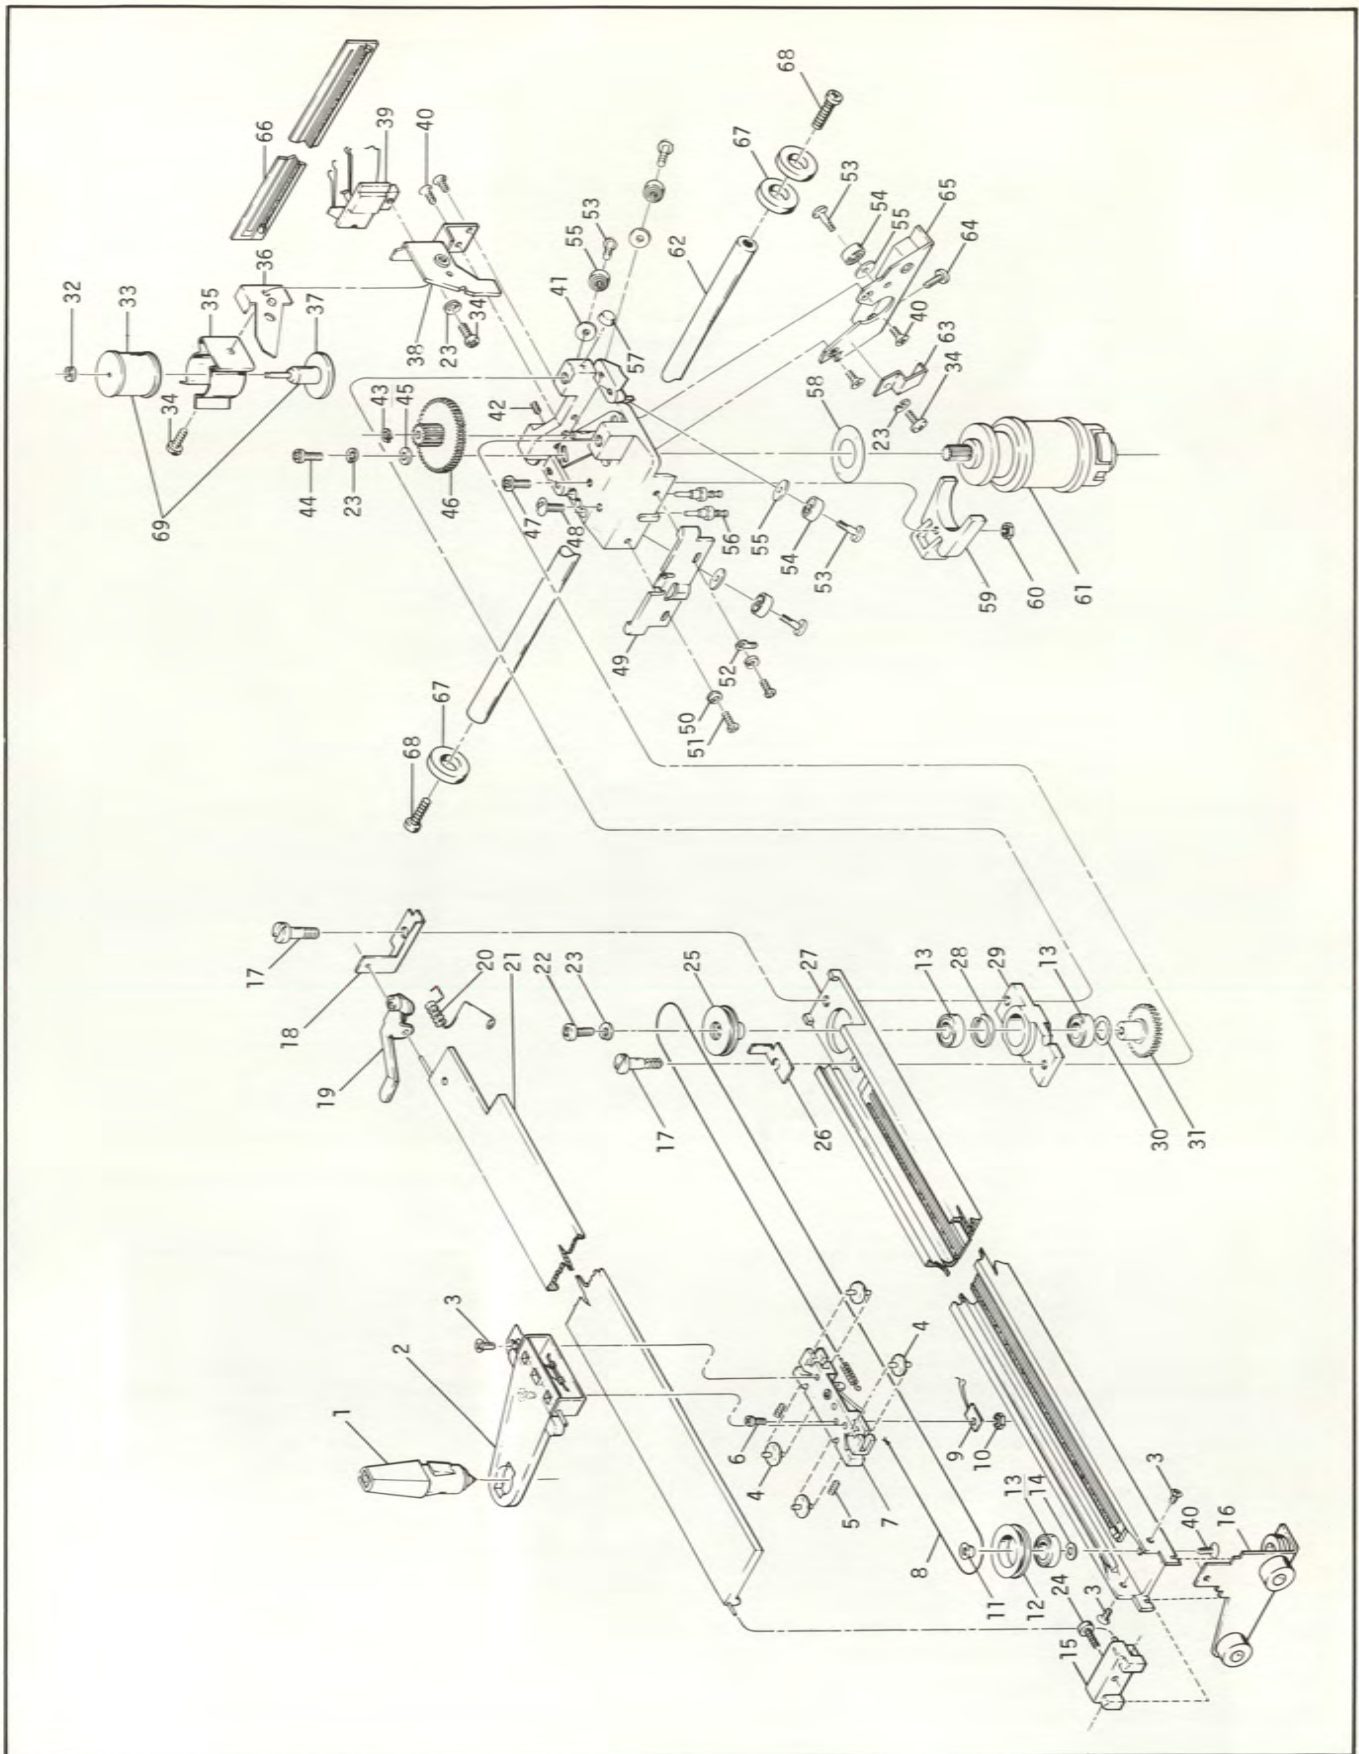


FIGURE 4-2. PEN ARM ASSEMBLY (Sheet 1 of 2)

Ref. Designation	Part No.	Description	Quantity
1	5080-7979	Pen - Disposable, red (pkg. of 3)	As Req'd
	5080-7980	Pen - Disposable, blue (pkg. of 3)	As Req'd
	5080-7981	Pen - Disposable, green (pkg. of 3)	As Req'd
	5080-7994	Pen - Disposable, black (pkg. of 3)	As Req'd
2	5060-6427	Holder, Pen	1
3	0520-0163	Screw - Mach, ss, 2-56 x .188 FH POZI D	4
4	07035-60860	Wheel Assembly, Pen Carriage	4
5	3030-0142	Screw - Set, 2-56 x .125, Allen	2
6	0570-0190	Screw - Mach. ss, 0-80 x .125 Fill H PD	1
7	09125-80590	Carriage Block and Wiper Assembly	1
8	09125-80440	Cable Assembly, Pen Carriage	1
9	09125-60110	Wiper Assembly (Y axis Limit Switch)	1
10	0590-0149	Nut - Hex, 0-80	1
11	07035-20240	Stud, Return Pulley	1
12	07035-20200	Pulley, Return	1
13	1410-0269	Ball Bearing	3
14	3050-0394	Washer - No. 4, Flat	2
15	09125-40060	Block Assembly, Pen Arm	1
16	07005-60260	Bracket Assembly - Slider	1
17	07035-20350	Screw, Shouldered	2
18	07035-00230	Mount - Rear, Scale	1
19	5060-6538	Pen Lift Assembly	1
20	1460-1201	Spring, Pen Lift	1
21	09125-60260	Slidewire Cover	As Req'd
22	2200-0145	Screw - Mach. ss, 4-40 x 7/16, PH POZI D	1
23	2190-0108	Washer - Lock, No. 4	4
24	2220-0009	Screw, Mach, 4-40 x 5/16, Fill, SSTL	1
25	07035-22180	Pulley, Drive	1
26	07005-20410	Stop, Pen Carriage	1
27	09125-80160	Pen Arm Assembly	1
28	1460-0296	Retaining Ring	1
29	07035-20330	Block, Arm Mounting	1
30	2190-0125	Shim - ss, 0.093 ID, 0.156 OD, 0.012 THK	As Req'd
31	07004-60070	Pen Drive Assembly	1
32	0510-0810	Retaining Ring	1
33	09125-60030	Solenoid Assembly	1
34	2270-0022	Screw - Mach. ss, 4-40 x .188, PH PD	1
35	1400-0304	Holder, Solenoid Assembly	1
36	07005-00730	Pointer, Index	1
37	09125-60350	Plunger Assembly, Solenoid	1
38	5060-4569	Bracket Assembly - Coil and Wiper	1
39	09125-80170	Wiper Assembly, X axis	1
40	2200-0164	Screw - Mach. ss, 4-40 x 3/16 FH PD	5
41	09125-60270	Motor Block Assembly	1
42	3030-0208	Screw - Set, 4-40 x .125, Allen	3
43	0510-0724	Retaining Ring	1
44	2200-0139	Screw - Mach. ss, 4-40 x .25 PH POZI D	1
45	3050-0394	Washer - Flat, .130 ID, .25 OD, .02 THK	1
46	07004-60060	Gear Assembly, Pen Drive	1
47	2200-0145	Screw - Mach. ss, 4-40 x .438, PH POZI D	1
48	2200-0710	Screw - Mach. ss, 4-40 x .375, TH SD	1
49	5020-4225	Yoke, Cable	1
50	2190-0094	Washer - Lock, No. 2	2
51	0520-0066	Screw - Mach. ss, 2-56 x .188 PH PD	2
52	0360-0243	Terminal Lug	1
53	0570-1103	Screw, Shoulder	5
54	1410-0941	Ball Bearing	5
55	3050-0367	Washer - Flat, .105 ID, 1/4 OD, 1/64 THK	5
56	0360-0357	Stud, Terminal	2
57	07035-00760	Bumper	2
58	07035-22440	Insulator, Mylar	1
59	09125-40030	Cleat, Motor	1
60	2260-0007	Nut, 4-40	1
61	5080-7966	Servo Motor	1
62	09125-20210	Rod, Track	2 in.
63	07004-00350	Clamp, Trailing Cable	1
64	2200-0048	Screw - Mach. ss, 4-40 x .375 PH PD	1
65	09125-60280	Bearing Adjustment Assembly	1
66	09125-80230	X axis Slidewire and Limit Switch Assembly	1
67	09125-20070	Bumper	3
68	2360-0209	Screw - Mach. 6-32 x 1.00, SST, Pan, POZI	2
69	09125-60040	Pen, Solenoid, Complete	1

FIGURE 4-2. PEN ARM ASSEMBLY (Sheet 2 of 2)

SECTION V

TROUBLESHOOTING

5-1. INTRODUCTION

5-2. CONTENT. This section contains instructions for troubleshooting the Model 9125A Calculator Plotter. A Printed Circuit Board location drawing (Figure 5-1) along with a Troubleshooting Chart (Figure 5-2) are supplied to aid in troubleshooting.

5-3. TROUBLESHOOTING

5-4. REQUIREMENTS. Troubleshooting of the 9125A should be performed in a logical manner. The

concept of bracketing should be established, such as establishing which section is not operational or operating abnormally. This is generally the fastest method to locate trouble in a unit. The block diagram and logic flow diagram (Figures 2-1 and 2-2) in Section II may be utilized to assist troubleshooting. However, the Troubleshooting Chart should serve as the prime troubleshooting guide.

5-5. TROUBLESHOOTING CHART. Malfunctions not caused by improper adjustments may be detected by referring to the Troubleshooting Chart, Figure 5-2.

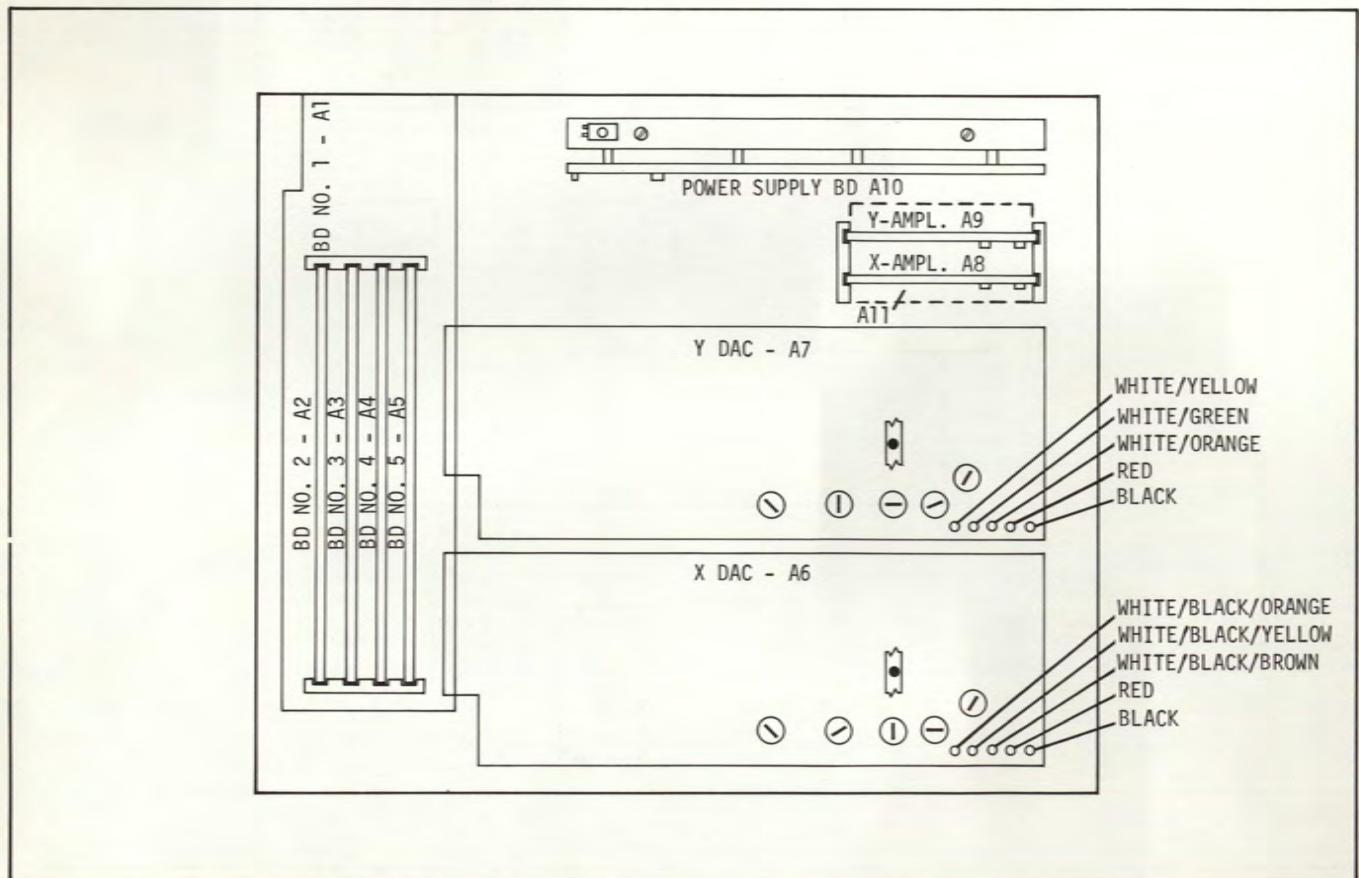


FIGURE 5-1. PRINTED CIRCUIT BOARD LOCATIONS

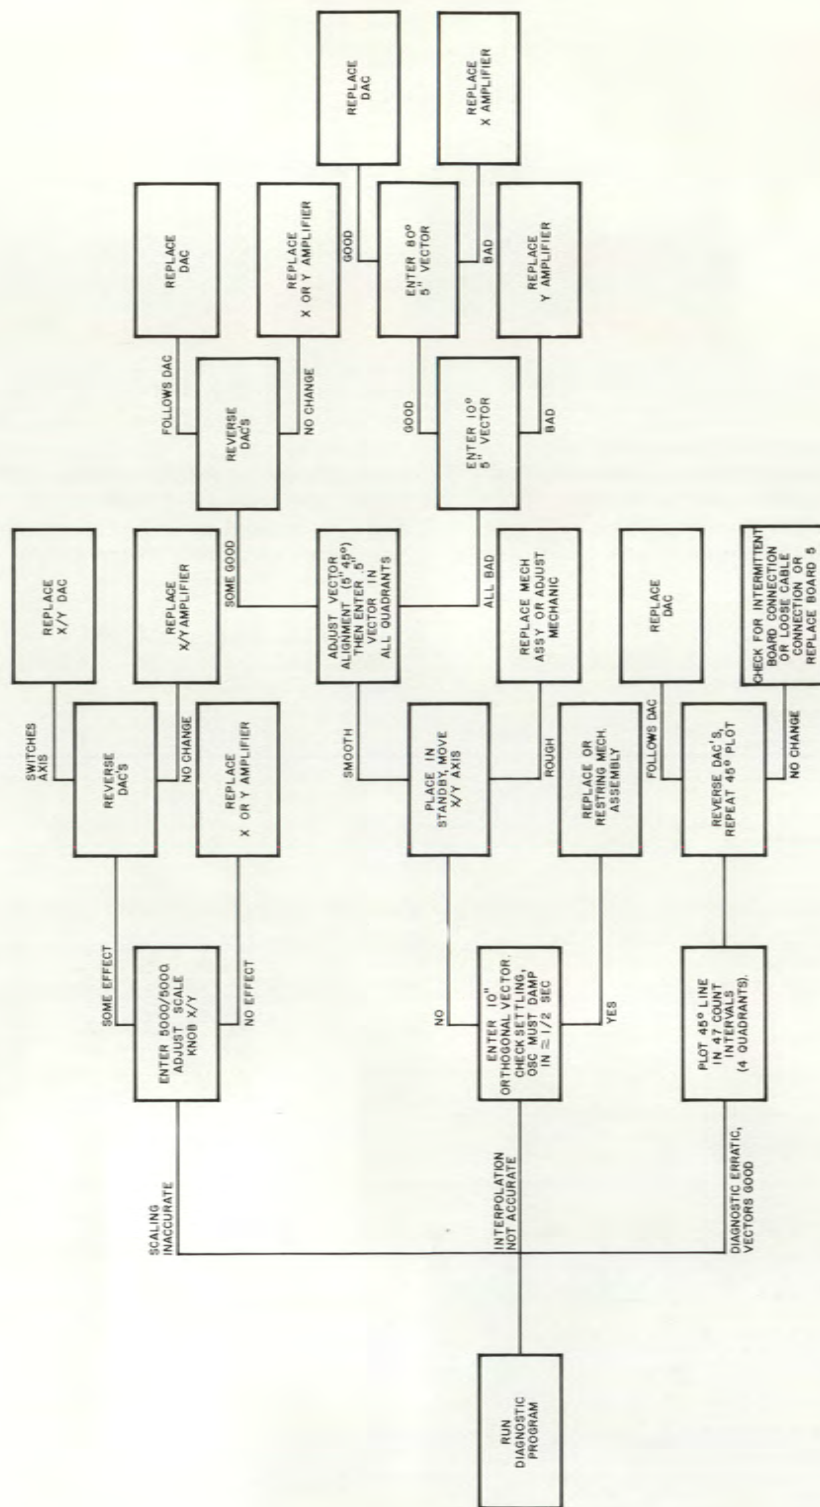


FIGURE 5-2. TROUBLESHOOTING CHART (Sheet 1 of 4)

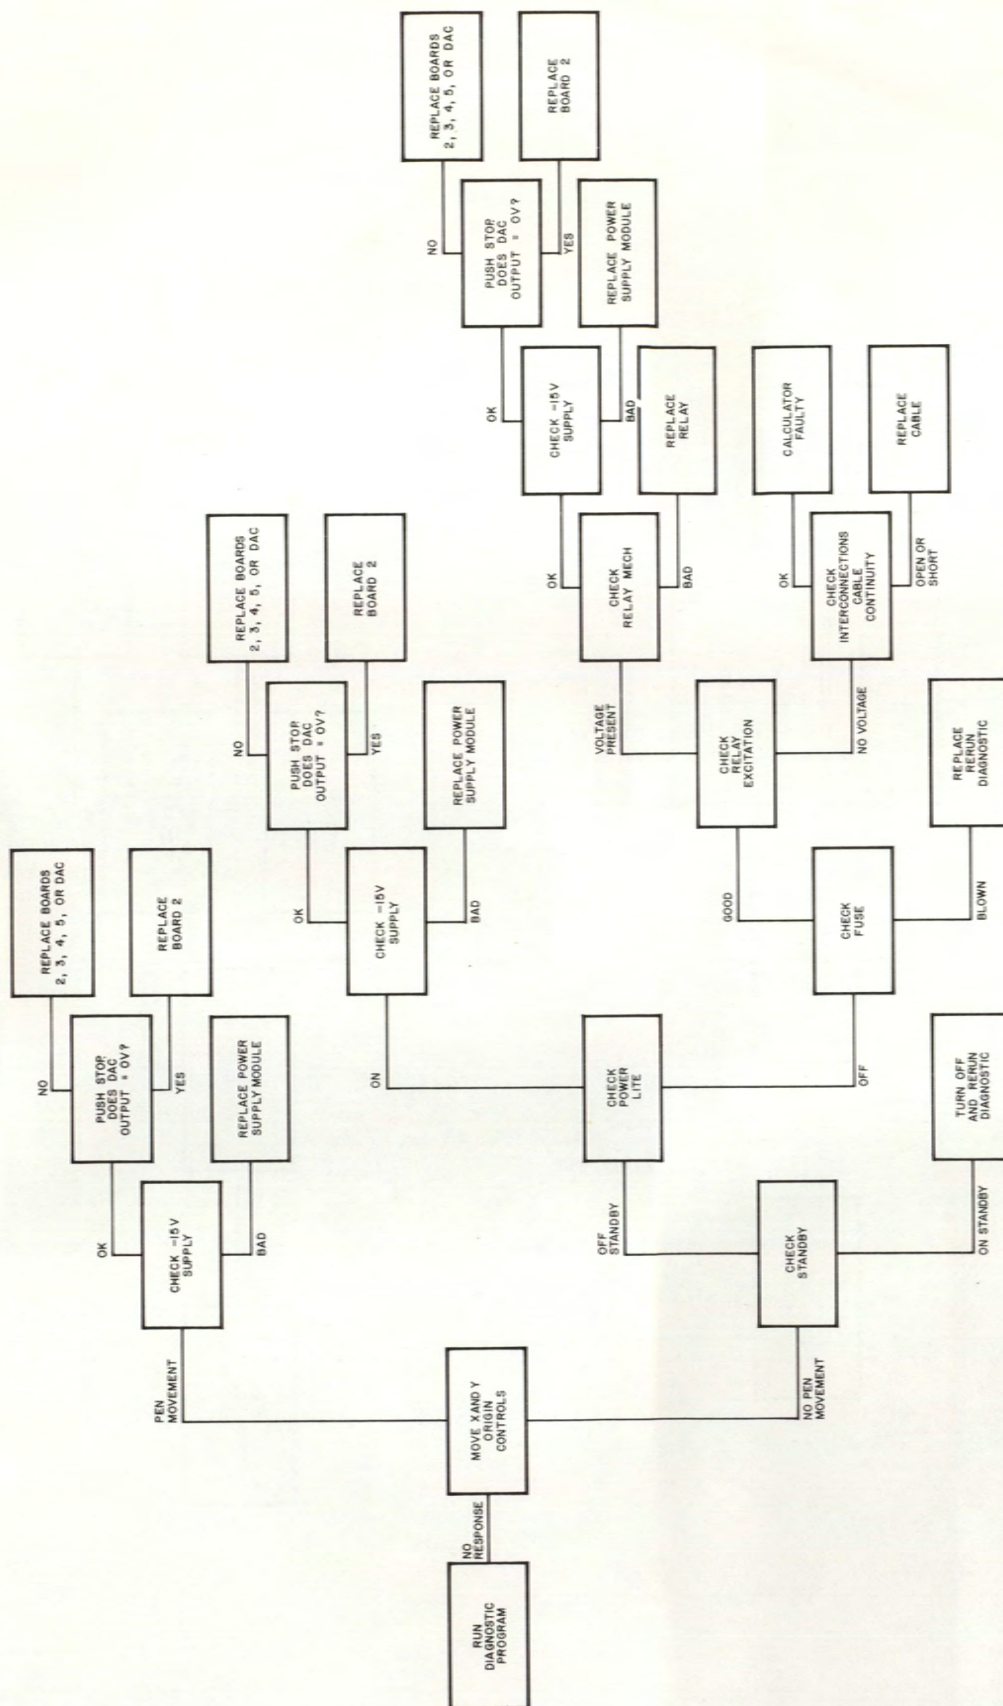


FIGURE 5-2. TROUBLESHOOTING CHART (Sheet 2 of 4)

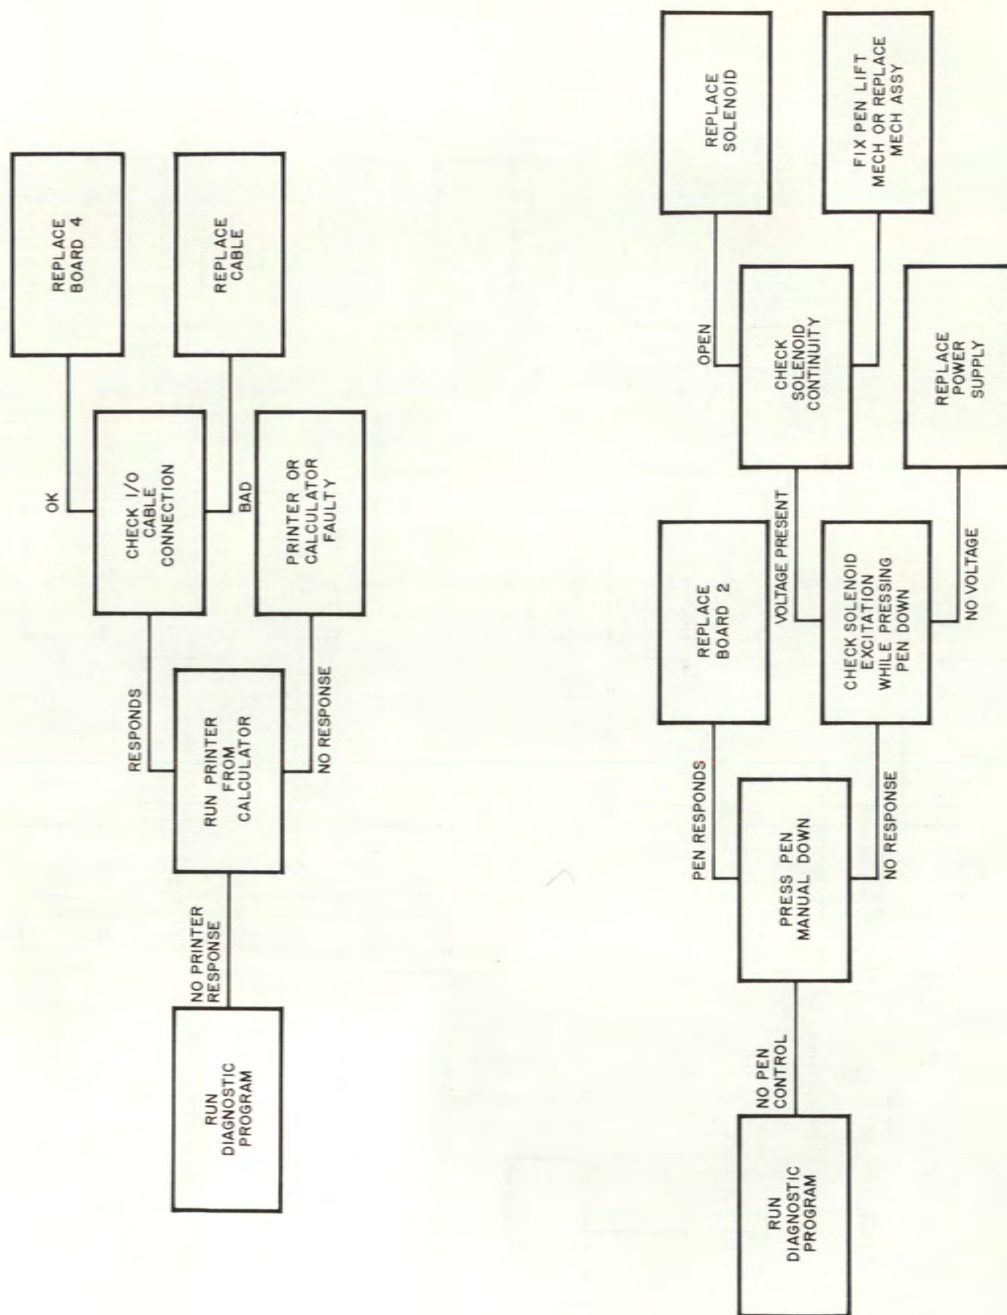


FIGURE 5-2. TROUBLESHOOTING CHART (Sheet 3 of 4)

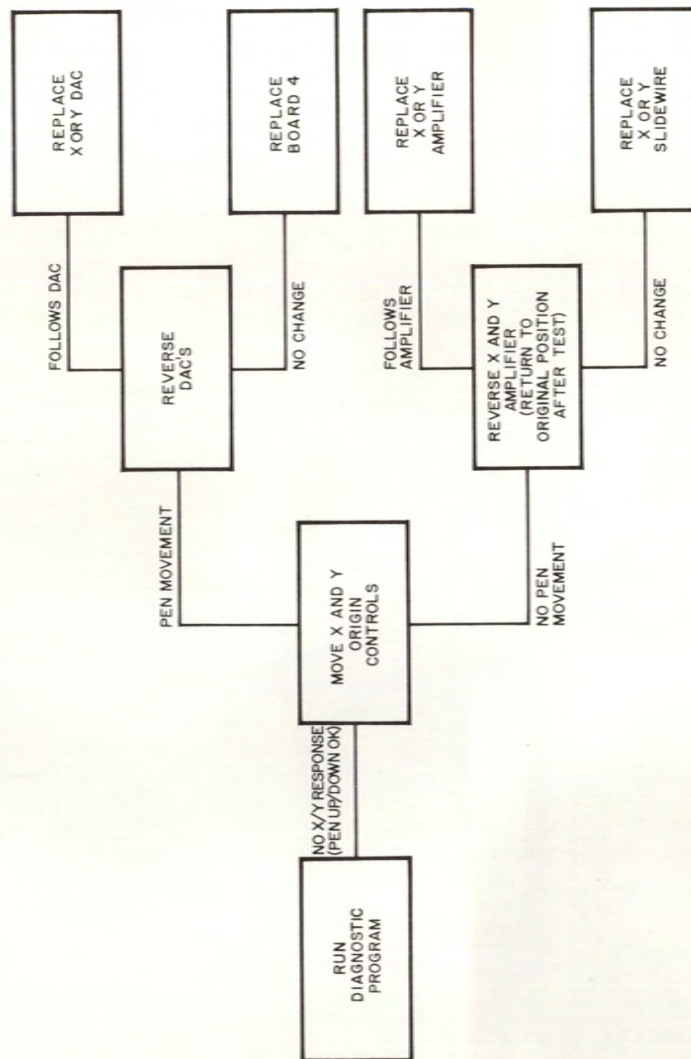


FIGURE 5-2. TROUBLESHOOTING CHART (Sheet 4 of 4)

SALES & SERVICE OFFICES

UNITED STATES

ALABAMA

P.O. Box 4207
2003 Byrd Spring Road S.W.
Huntsville 35802
Tel: (205) 881-4591
TWX: 810-726-2204

ARIZONA

3009 North Scottsdale Road
Scottsdale 85251
Tel: (602) 945-7601
TWX: 910-950-1282

5737 East Broadway

Tucson 85716
Tel: (602) 298-2313
TWX: 910-952-1162

CALIFORNIA

1430 East Orangethorpe Ave.
Fullerton 92631
Tel: (714) 870-1000

3939 Lankershim Boulevard

North Hollywood 91604
Tel: (213) 877-1282
TWX: 910-499-2170

1101 Embarcadero Road

Palo Alto 94303
Tel: (415) 327-6500
TWX: 910-373-1280

2591 Carlsbad Avenue

Sacramento 95821
Tel: (916) 482-1463
TWX: 910-367-2092

1055 Shafter Street

San Diego 92106
Tel: (714) 223-8103
TWX: 910-335-2000

COLORADO

7965 East Prentice
Englewood 80110
Tel: (303) 771-3455
TWX: 910-935-0705

CONNECTICUT

508 Tolland Street
East Hartford 06108
Tel: (203) 289-9394
TWX: 710-425-3416

111 East Avenue

Norwalk 06851
Tel: (203) 853-1251
TWX: 710-468-3750

DELAWARE

3941 Kennett Pike
Wilmington 19807
Tel: (302) 655-6161
TWX: 510-666-2214

FLORIDA

P.O. Box 545
Suite 106
9999 N.E. 2nd Avenue
Miami Shores 33153
Tel: (305) 754-4565
TWX: 810-848-7262

P.O. Box 20007

Herndon Station 32814
621 Commonwealth Avenue
Orlando
Tel: (305) 841-3970
TWX: 810-850-0113

P.O. Box 8128

Madeira Beach 33708
410 150th Avenue
St. Petersburg
Tel: (813) 391-0211
TWX: 810-863-0366

GEORGIA

P.O. Box 28234
450 Interstate North
Atlanta 30328
Tel: (404) 436-6181
TWX: 810-766-4890

ILLINOIS

5500 Howard Street
Skokie 60076
Tel: (312) 677-0400
TWX: 910-223-3613

INDIANA

3839 Meadows Drive
Indianapolis 46205
Tel: (317) 546-4891
TWX: 810-341-3263

LOUISIANA

P.O. Box 856
1942 Williams Boulevard
Kenner 70062
Tel: (504) 721-6201
TWX: 810-955-5524

MARYLAND

6707 Whitestone Road
Baltimore 21207
Tel: (301) 944-5400
TWX: 710-862-0850

P.O. Box 1648

2 Choke Cherry Road
Rockville 20850
Tel: (301) 948-6370
TWX: 710-828-9684

MASSACHUSETTS

Herndon Station 32814
32 Hartwell Ave.
Lexington 02173
Tel: (617) 861-8960
TWX: 710-326-6904

MICHIGAN

24315 Northwestern Highway
Southfield 48075
Tel: (313) 353-9100
TWX: 810-232-1532

MINNESOTA

2459 University Avenue
St. Paul 55114
Tel: (612) 645-9461
TWX: 910-563-3734

MISSOURI

11131 Colorado Ave.
Kansas City 64137
Tel: (816) 763-8000
TWX: 910-771-2087

2812 South Brentwood Blvd.

St. Louis 63144
Tel: (314) 962-5000
TWX: 910-760-1670

NEW JERSEY

W. 120 Century Road
Paramus 07652
Tel: (201) 265-5000
TWX: 710-990-4951

1060 N. Kings Highway

Cherry Hill 08034
Tel: (609) 667-4000
TWX: 710-892-4945

NEW MEXICO

P.O. Box 8366
Station C
6501 Lomas Boulevard N.E.
Albuquerque 87108
Tel: (505) 255-5586
TWX: 910-989-1665

156 Wyatt Drive

Las Cruces 88001
Tel: (505) 526-2485
TWX: 910-983-0550

NEW YORK

1702 Central Avenue
Albany 12205
Tel: (518) 869-8462
TWX: 710-441-8270

1219 Campville Road

Endicott 13760
Tel: (607) 754-0050
TWX: 510-252-0890

82 Washington Street

Poughkeepsie 12601
Tel: (914) 454-7330
TWX: 510-248-0012

39 Saginaw Drive

Rochester 14623
Tel: (716) 473-9500
TWX: 510-253-5981

1025 Northern Boulevard

Roslyn, Long Island 11576
Tel: (516) 869-8400
TWX: 510-223-0811

5858 East Molloy Road

Syracuse 13211
Tel: (315) 454-2486
TWX: 710-541-0482

NORTH CAROLINA

P.O. Box 5188
1923 North Main Street
High Point 27262
Tel: (919) 885-8101
TWX: 510-926-1516

OHIO

25575 Center Ridge Road
Cleveland 44145
Tel: (216) 835-0300
TWX: 810-427-9129

3460 South Dixie Drive

Dayton 45439
Tel: (513) 298-0351
TWX: 810-459-1925

OKLAHOMA

2919 United Founders Boulevard
Oklahoma City 73112
Tel: (405) 848-2801
TWX: 910-830-6852

OREGON

Westhills Mall, Suite 158
4475 S.W. Scholls Ferry Road
Portland 97225
Tel: (503) 292-9171
TWX: 910-464-6103

PENNSYLVANIA

2500 Moss Side Boulevard
Monroeville 15146
Tel: (412) 271-0724
TWX: 710-797-3650

1021 8th Avenue

King of Prussia Industrial Park
King of Prussia 19406
Tel: (215) 265-7000
TWX: 510-660-2670

RHODE ISLAND

873 Waterman Ave.
East Providence 02914
Tel: (401) 434-5535
TWX: 710-381-7573

TEXAS

P.O. Box 1270
201 E. Arapaho Rd.
Richardson 75080
Tel: (214) 231-6101
TWX: 910-867-4723

6300 Westpark Drive

Houston 77027
Tel: (713) 781-6000
TWX: 910-881-2645

231 Billy Mitchell Road

San Antonio 78225
Tel: (512) 434-4171
TWX: 910-871-1170

UTAH

2890 South Main Street
Salt Lake City 84115
Tel: (801) 487-0715
TWX: 910-925-5681

VERMONT (Feb. 70)

P.O. Box 2287
Kennedy Drive
South Burlington 05401
Tel: (802) 658-4455
TWX: 710-658-4712

VIRGINIA

P.O. Box 6514
2111 Spencer Road
Richmond 23230
Tel: (703) 282-5451
TWX: 710-956-0157

WASHINGTON

433-108th N.E.
Bellevue 98004
Tel: (206) 454-3971
TWX: 910-443-2303

*WEST VIRGINIA

Charleston
Tel: (304) 768-1232

FOR U.S. AREAS NOT LISTED:

Contact the regional office nearest you: Atlanta, Georgia... North Hollywood, California... Paramus, New Jersey... Skokie, Illinois. Their complete addresses are listed above.

*Service Only

CANADA

ALBERTA

Hewlett-Packard (Canada) Ltd.
11745 Jasper Ave.
Edmonton
Tel: (403) 482-5561
TWX: 610-831-2431

BRITISH COLUMBIA

Hewlett-Packard (Canada) Ltd.
1037 West Broadway
Vancouver 12
Tel: (604) 731-5301
TWX: 610-922-5059

MANITOBA

Hewlett-Packard (Canada) Ltd.
511 Bradford Ct.
St. James
Tel: (204) 786-7581
TWX: 610-671-3531

NOVA SCOTIA

Hewlett-Packard (Canada) Ltd.
2745 Dutch Village Rd.
Suite 203
Halifax
Tel: (902) 455-0511
TWX: 610-271-4482

ONTARIO

Hewlett-Packard (Canada) Ltd.
880 Lady Ellen Place
Ottawa 3
Tel: (613) 722-4223
TWX: 610-562-1952

Hewlett-Packard (Canada) Ltd.

50 Galaxy Blvd.
Rexdale
Tel: (416) 677-9611
TWX: 610-492-4246

QUEBEC

Hewlett-Packard (Canada) Ltd.
275 Hymus Boulevard
Pointe Claire
Tel: (514) 697-4232
TWX: 610-422-3022
Telex: 01-20607

FOR CANADIAN AREAS NOT LISTED:

Contact Hewlett-Packard (Canada) Ltd. in Pointe Claire, at the complete address listed above.

CENTRAL AND SOUTH AMERICA

ARGENTINA

Hewlett-Packard Argentina
S.A.C.e.I.
Lavalle 1171 - 3°
Buenos Aires
Tel: 35-0436, 35-0627, 35-0431
Telex: 012-1009
Cable: HEWPACKARG

BRAZIL

Hewlett-Packard Do Brasil
L.e.C. Ltda.
Rua Coronel Oscar Porto, 691
Sao Paulo - 8, SP
Tel: 71-1503
Cable: HEWPACK Sao Paulo

Hewlett-Packard Do Brasil

L.e.C. Ltda.
Avenida Franklin Roosevelt 84-
grupo 203
Rio de Janeiro, ZC-39, GB
Tel: 232-9733
Cable: HEWPACK Rio de Janeiro

CHILE

Héctor Calcagni y Cia, Ltda.
Bustos, 1932-3er Piso
Casilla 13942
Santiago
Tel: 4-2396
Cable: Calcagni Santiago

COLOMBIA

Instrumentacion
Henrik A. Langebaek & Kier
Ltda.
Carrera 7 No. 48-59
Apartado Aereo 6287
Bogota, D.E.
Tel: 45-78-06, 45-55-46
Cable: AARIS Bogota
Telex: 044-600

COSTA RICA

Lic. Alfredo Gallegos Gudián
Apartado 3243
San José
Tel: 21-86-13
Cable: GALGUR San José

ECUADOR

Laboratorios de Radio-Ingenieria
Calle Guayaquil 1246
Post Office Box 3199
Quito
Tel: 12496
Cable: HORVATH Quito

EL SALVADOR

Electronica
Apartado Postal 1589
27 Avenida Norte 1133
San Salvador
Tel: 25-74-50
Cable: ELECTRONICA
San Salvador

GUATEMALA

Olander Associates Latin America
Apartado Postal 1226
Ruta 4, 6-53, Zona 4
Guatemala City
Tel: 63958
Cable: OLALA Guatemala City

JAMAICA

General Engineering Services,
Ltd.
27 Dunrobin Ave.
Kingston
Tel: 42657
Cable: GENSERV

MEXICO

Hewlett-Packard Mexicana, S.A.
de C.V.
Moras 439
Col. del Valle
Mexico 12, D.F.
Tel: 5-75-46-49

NICARAGUA

Roberto Terán G.
Apartado Postal 689
Edificio Terán
Managua
Tel: 3451, 3452
Cable: ROTERAN Managua

PANAMA

Electronica Balboa, S.A.
P.O. Box 4929
Ave. Manuel Espinosa No. 13-50
Bldg. Alina
Panama City
Tel: 30833
Cable: ELECTRON Panama City

PERU

Fernando Ezeta B.
Avenida Petit Thouars 4719
Miraflores
Casilla 3061
Lima
Tel: 45-2335
Cable: FEPERU Lima

PUERTO RICO

San Juan Electronics, Inc.
P.O. Box 5167
Ponce de Leon 154
Pda. 3-Pta. de Tierra
San Juan 00905
Tel: (809) 725-3342
Cable: SATRONICS San Juan
Telex: SATRON 3450 332

URUGUAY

Pablo Ferrando S.A.
Comercial e Industrial
Avenida Italia 2877
Casilla de Correo 370
Montevideo
Tel: 40-3102
Cable: RADIUM Montevideo

VENEZUELA

Hewlett-Packard De Venezuela
C.A.
Apartado 50933
Caracas
Tel: 71.88.05, 71.88.69, 71.99.30
Cable: HEWPACK Caracas

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard
INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8461



EUROPE

AUSTRIA

Unilabor GmbH
Wissenschaftliche Instrumente
Rummelhardtgasse 6/3
P.O. Box 33
Vienna A-1095
Tel: 42 61 81
Cable: LABORINSTRUMENT
Vienna
Telex: 75 762

BELGIUM

Hewlett-Packard Benelux S.A.
348 Boulevard du Souverain
Brussels 16
Tel: 72 22 40
Cable: PALOBEN Brussels
Telex: 23 494

DENMARK

Hewlett-Packard A/S
Langebjerg 6
2850 Naerum
Tel: (01) 80 40 40
Cable: HEWPACK AS
Telex: 66 40

FINLAND

Hewlett-Packard Oy
Gyldenintie 3
Helsinki 20
Tel: 67 35 38
Cable: HEWPACKOY-Helsinki
Telex: 12-1563

FRANCE

Hewlett-Packard France
Quartier de Courtaboeuf
Boite Postale No. 6
91 Orsay
Tel: 920 88 01
Cable: HEWPACK Orsay
Telex: 60048
Hewlett-Packard France
4 Quai des Etoiles
69 Lyon 5ème
Tel: 42 63 45
Cable: HEWPACK Lyon
Telex: 31617

GERMANY

Hewlett-Packard Vertriebs-GmbH
Lietzenburgerstrasse 30
1 Berlin W 30
Tel: 24 60 65/66
Telex: 18 34 05
Hewlett-Packard Vertriebs-GmbH
Herrenbergerstrasse 110
703 Böblingen, Württemberg
Tel: 07031-6671
Cable: HEPAG Böblingen
Telex: 72 65 739
Hewlett-Packard Vertriebs-GmbH
Achenbachstrasse 15
4 Düsseldorf 1
Tel: 68 52 58/59
Telex: 85 86 533
Hewlett-Packard Vertriebs-GmbH
Berliner Strasse 117
6 Nieder-Eschbach/Frankfurt 56
Tel: (0611) 50 10 64
Cable: HEWPACKSA Frankfurt
Telex: 41 32 49

Hewlett-Packard Vertriebs-GmbH
Beim Strohhaus 25
2 Hamburg 1
Tel: 24 05 51/52
Cable: HEWPACKSA Hamburg
Telex: 21 53 32

Hewlett-Packard Vertriebs-GmbH
Reginfriedstrasse 13
8 München 9
Tel: 0811 69 59 71/75
Cable: HEWPACKSA München
Telex: 52 49 85

GREECE

Kostas Karayannis
18, Ermou Street
Athens 126
Tel: 230303 232947
Cable: RAKAR Athens
Telex: 21 59 62 RAKAR GR

IRELAND

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks, England
Tel: Slough 753-3341
Cable: HEWPIE Slough
Telex: 84413

ITALY

Hewlett-Packard Italiana S.p.A.
Via Amerigo Vesputti 2
20124 Milano
Tel: 6251 (10 lines)
Cable: HEWPACKIT Milan
Telex: 32046

Hewlett-Packard Italiana S.p.A.
Palazzo Italia
Piazza Marconi 25
00144 Rome - Eur
Tel: 591 2544
Cable: HEWPACKIT Rome
Telex: 61514

NETHERLANDS

Hewlett-Packard Benelux, N.V.
Weerdestein 117
Amsterdam, Z 11
Tel: 42 77 77
Cable: PALOBEN Amsterdam
Telex: 13 216

NORWAY

Hewlett-Packard Norge A/S
Box 149
Nesveien 13
Haslum
Tel: 53 83 60
Cable: HEWPACK Oslo
Telex: 6621

PORTUGAL

Telectra
Rua Rodrigo da Fonseca 103
P.O. Box 2531
Lisbon 1
Tel: 68 60 72
Cable: TELECTRA Lisbon
Telex: 1598

SPAIN

Atajo Ingenieros
Ganduxer 76
Barcelona 6
Tel: 211-44-66
Atajo Ingenieros
Enrique Larreta 12
Madrid, 16
Tel: 235 43 44
Cable: TELEATAJO Madrid
Telex: 2 72 49

SWEDEN

Hewlett-Packard (Sverige) AB
Hagakersgatan 9C
S 431 04 Malmö 4
Tel: 031 - 27 68 00
Hewlett-Packard (Sverige) AB
Svetsarvägen 7
S171 20 Solna 1
Tel: (08) 98 12 50
Cable: MEASUREMENTS
Stockholm
Telex: 10721

SWITZERLAND

Hewlett-Packard (Schweiz) AG
Zürcherstrasse 20
8952 Schlieren
Zürich
Tel: (051) 98 18 21/24
Cable: HEWPACKAG Zurich
Telex: 53933

Hewlett-Packard (Schweiz) A.G.
Rue du Bois-du-Lan 7
1217 Meyrin-Geneva
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva
Telex: 2 24 86

TURKEY

Telekom Engineering Bureau
P.O. Box 376 - Galata
Istanbul
Tel: 49 40 40
Cable: TELEMATION Istanbul
Telex: 84413

UNITED KINGDOM

Hewlett-Packard Ltd.
224 Bath Road
Slough, Bucks
Tel: Slough 33341
Cable: HEWPIE Slough
Telex: 84413

YUGOSLAVIA

Belram S.A.
83 avenue des Mimosas
Brussels 15, Belgium
Tel: 34 33 32, 34 26 19
Cable: BELRAMEL Brussels
Telex: 21790

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard S.A.
Rue du Bois-du-Lan 7
1217 Meyrin-Geneva
Tel: (022) 41 54 00
Cable: HEWPACKSA Geneva
Telex: 2.24.86

AFRICA, ASIA, AUSTRALIA

ANGOLA

Telectra Empresa Técnica
de Equipamentos Eléctricos
SAR
Rua de Barbosa Rodrigues
42-1º
Box 6487
Luanda
Cable: TELECTRA Luanda

AUSTRALIA

Hewlett-Packard Australia
Pty. Ltd.
22-26 Weir Street
Glen Iris, 3146
Victoria
Tel: 20.1371 (4 lines)
Cable: HEWPAUD Melbourne
Telex: 31024

Hewlett-Packard Australia
Pty. Ltd.
61 Alexander Street
Crows Nest 2065
New South Wales
Tel: 43.7866
Cable: HEWPAUD Sydney
Telex: 21561

Hewlett-Packard Australia
Pty. Ltd.
97 Churchill Road
Prospect 5082
South Australia
Tel: 65.2366
Cable: HEWPAUD Adelaide
Hewlett-Packard Australia
Pty. Ltd.
2nd Floor, Suite 13
Casablanca Buildings
196 Adelaide Terrace
Perth, W.A. 6000
Tel: 21-3330

CEYLON

United Electricals Ltd.
P.O. Box 681
Yahala Building
Staples Street
Colombo 2
Tel: 5496
Cable: HOTPOINT Colombo

CYPRUS

Kyprionics
19-19D Hommer Avenue
P.O. Box 752
Nicosia
Tel: 6282-75628
Cable: HE-I-NAMI

ETHIOPIA

African Salespower & Agency
Private Ltd., Co.
P.O. Box 718
58/59 Cunningham St.
Addis Ababa
Tel: 12285
Cable: ASACO Addisababa

HONG KONG

Schmidt & Co. (Hong Kong) Ltd.
P.O. Box 297
1511, Prince's Building
10, Chater Road
Hong Kong
Tel: 240168, 232735
Cable: SCHMIDTCO Hong Kong

INDIA

The Scientific Instrument
Co., Ltd.
6, Tej Bahadur Sapru Road
Allahabad 1
Tel: 2451
Cable: SICO Allahabad

The Scientific Instrument
Co., Ltd.
12/5 Dickenson Road
Bangalore -1
Cable: SICO Bangalore
The Scientific Instrument
Co., Ltd.
240, Dr. Dadabhai Naoroji Road
Bombay 1
Tel: 26-2542
Cable: SICO Bombay

The Scientific Instrument
Co., Ltd.
11, Esplanade East
Calcutta 1
Tel: 23-4129
Cable: SICO Calcutta
The Scientific Instrument
Co., Ltd.
30, Mount Road
Madras 2
Tel: 86339
Cable: SICO Madras

The Scientific Instrument
Co., Ltd.
17, Kamalnayan Society
P.O. Navajivan
Ahmedabad 14
Cable: SICO, Ahmedabad

The Scientific Instrument Co. Ltd.
5-8-525 Mahatma Gandhi Road
Hyderabad-1 (A-P) India
Cable: SICO Hyderabad

The Scientific Instrument Co., Ltd.
8-7, Almeri Gate Extn.
New Delhi 1
Tel: 27-1053
Cable: SICO New Delhi

INDONESIA

Bah Bolon Trading Coy. N.V.
Djaloh Merdeka 29
Bandung
Tel: 4915 51560
Cable: ILMU
Telex: 809

IRAN

Telecom, Ltd.
P.O. Box 1812
240 Kh. Saba Shomali
Teheran
Tel: 43850, 48111
Cable: BASCOM Teheran

ISRAEL

Electronics & Engineering
Div. of Motorola Israel Ltd.
17 Aminadav Street
Tel-Aviv
Tel: 36941 (3 lines)
Cable: BASTEL Tel-Aviv
Telex: Bastel Tv 033-569

JAPAN

Yokogawa-Hewlett-Packard Ltd.
Nisei Ibaragi Bldg.
2-2-8 Kasuga
Ibaragi-Shi
Osaka
Tel: 23-1641
Yokogawa-Hewlett-Packard Ltd.
Ito Building
No. 59, Kotori-cho
Nakamura-ku, Nagoya City
Tel: 551-0215

Yokogawa-Hewlett-Packard Ltd.
Ohashi Building
59 Yoyogi 1-chrome
Shibuya-ku, Tokyo
Tel: 370-2281/7
Telex: 232-2024YHP
Cable: YHPMARKET TOK 23-724

KENYA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 68206, 58196
Cable: ARJAYTEE Nairobi

KOREA

American Trading Co., Korea, Ltd.
P.O. Box 1103
Dae Kyung Bldg.
107 Sejong Ro
Chongro Ku
Seoul
Tel: 75-5841 (4 lines)
Cable: AMTRACCO Seoul

LEBANON

Constantin E. Macridis
Clemenceau Street
P.O. Box 7213
Beirut
Tel: 220846
Cable: ELECTRONUCLEAR Beirut

MALAYSIA

MECOMB Malaysia Ltd.
2 Lorong 13/6A
Section 13
Petaling Jaya, Selangor
Cable: MECOMB Kuala Lumpur

MOZAMBIQUE

A. N. Gonçalves, LDA.
4.1 Apt. 14 Av. D. Luis
P.O. Box 107
Lourenco Marques
Cable: NEGON

NEW ZEALAND

Hewlett-Packard (N.Z.) Ltd.
32-34 Kent Terrace
P.O. Box 9443
Wellington, N.Z.
Tel: 59-559
Cable: HEWPACK Wellington

PAKISTAN (EAST)

Mushko & Company, Ltd.
Ziraf Chambers
31, Jinnah Avenue
Dacca
Tel: 280058
Cable: NEWDEAL Dacca

PAKISTAN (WEST)

Mushko & Company, Ltd.
Oosman Chambers
Victoria Road
Karachi 3
Tel: 511027, 512927
Cable: COOPERATOR Karachi

PHILIPPINES

Electromex Inc.
2129 Pasong Tamo
Makati, Rizal
P.O. Box 4326
Manila
Tel: 88-91-71 or 88-83-76
Cable: ELEMEX Manila

SINGAPORE

Mechanical and Combustion
Engineering Company Ltd.
9, Jalan Kilang
Singapore, 3
Tel: 642361-3
Cable: MECOMB Singapore

SOUTH AFRICA

Hewlett-Packard South Africa
(Pty.), Ltd.
Hill House
43 Somerset Rd.
Cape Town
Tel: 3-6019
Cable: HEWPACK Cape Town
Telex: 7038CT

Hewlett-Packard South Africa

(Pty.), Ltd.
P.O. Box 31716
30 De Beer Street
Braamfontein, Johannesburg
Tel: 724-4172 724-4195
Telex: 0225 JH
Cable: HEWPACK Johannesburg

TAIWAN REP. OF CHINA

Hwa Sheng Electronic Co., Ltd.
P.O. Box 1558
Room 404
Chia Hsin Building
No. 96 Chung Shan
North Road, Sec. 2
Taipei
Tel: 555211 Ext. 532-539
545936, 546076, 548661
Cable: VICTRONIX Taipei

TANZANIA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 68203, 68206, 58196
Cable: ARJAYTEE Nairobi

THAILAND

The International
Engineering Co., Ltd.
P.O. Box 39
614 Sukhumvit Road
Bangkok
Tel: 910722 (7 lines)
Telex: INTENCO BK 226
Cable: GYSOM BANGKOK

UGANDA

R. J. Tilbury Ltd.
P.O. Box 2754
Suite 517/518
Hotel Ambassador
Nairobi
Tel: 25670, 68203, 68206, 58196
Cable: ARJAYTEE Nairobi

VIETNAM

Peninsular Trading Inc.
P.O. Box H-3
216 Hien-Vuong
Saigon
Tel: 20.805
Cable: PENINSULA Saigon

ZAMBIA

R. J. Tilbury (Zambia) Ltd.
P.O. Box 2792
Lusaka
Zambia, Central Africa

FOR AREAS NOT LISTED, CONTACT:

Hewlett-Packard
INTERCONTINENTAL
3200 Hillview Ave.
Palo Alto, California 94304
Tel: (415) 326-7000
TWX: 910-373-1267
Cable: HEWPACK Palo Alto
Telex: 034-8461

